

How to separate the motor from the chassis

1. UNFASTEN THE SCREWS OF THE MOTOR COVER FIRST
2. REMOVE 2 SHAFTS FROM THE HOUSING OF GEAR BOX
3. LIFT UP THE SUPPORT OF THE MOTOR

