
CLASS 8F 2-8-0 LOCOMOTIVE

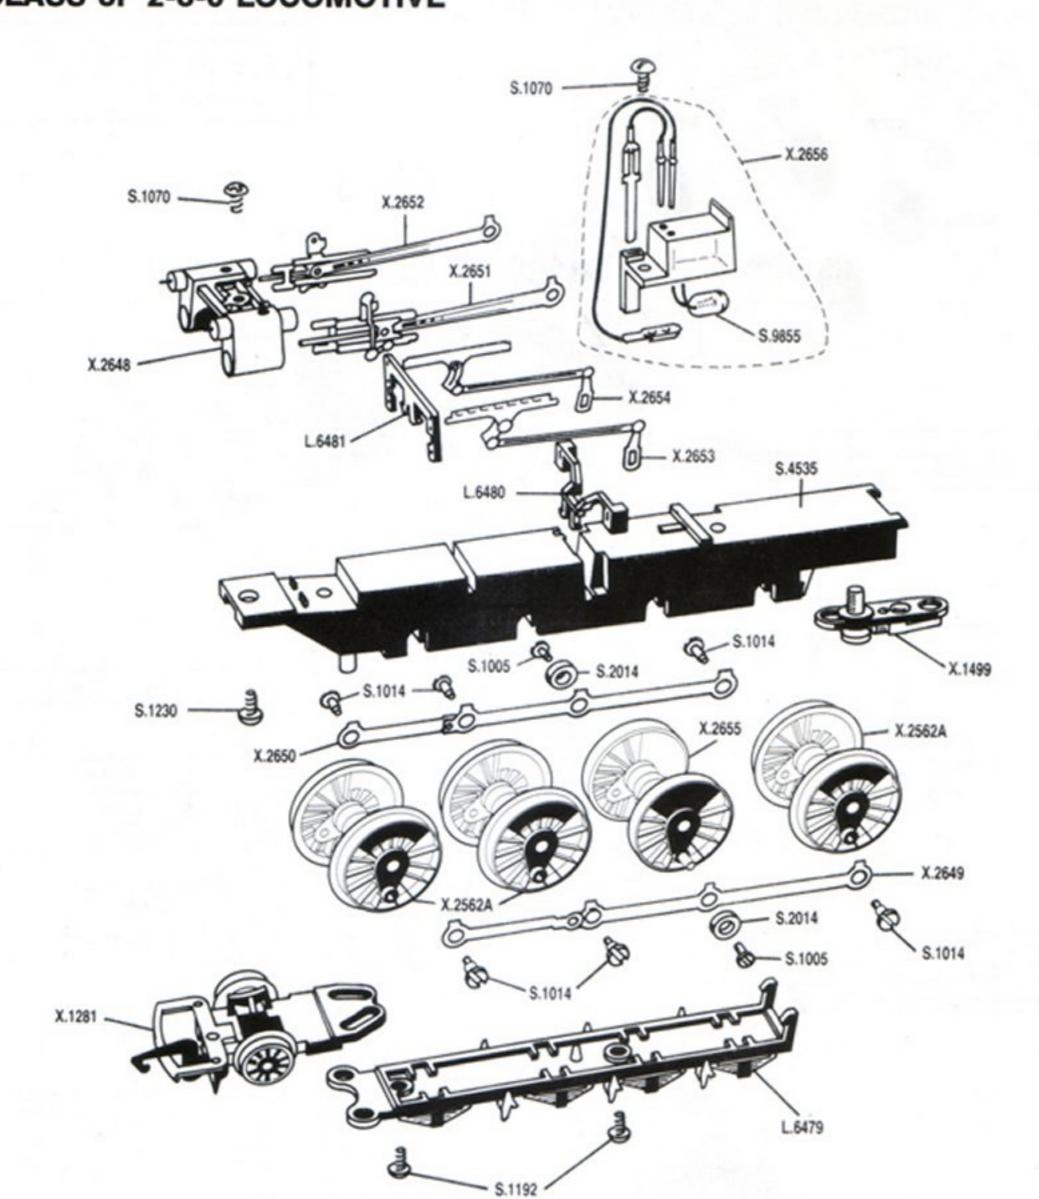

List of Parts													
X.1281 X.1499 X.2562A X.2648 X.2649 X.2650 X.2651 X.2652 X.2653 X.2654 X.2655 X.2656	Pony Truck Drawbar Assembly Driving Wheel/Axle Assy. flanged Cylinder Block L/H Coupling Rods R/H Coupling Rods L/H Connecting Rod Assy. R/H Connecting Rod Assy. L/H Link Assembly R/H Link Assembly Driving Wheel/Axle Assy. unflanged Firebox Glow Assembly	S.1005 S.1014 S.1070 S.1192 S.1230 S.2014	Underframe										

HORNIBY HOBBIES


Westwood, Margate, Kent, CT9 4JX, England. SERVICE SHEET No. 145

Issued September 1989

(HORNBY RAILWAYS)

See overleaf for Locomotive

TENDER FOR CLASS 8F LOCOMOTIVE

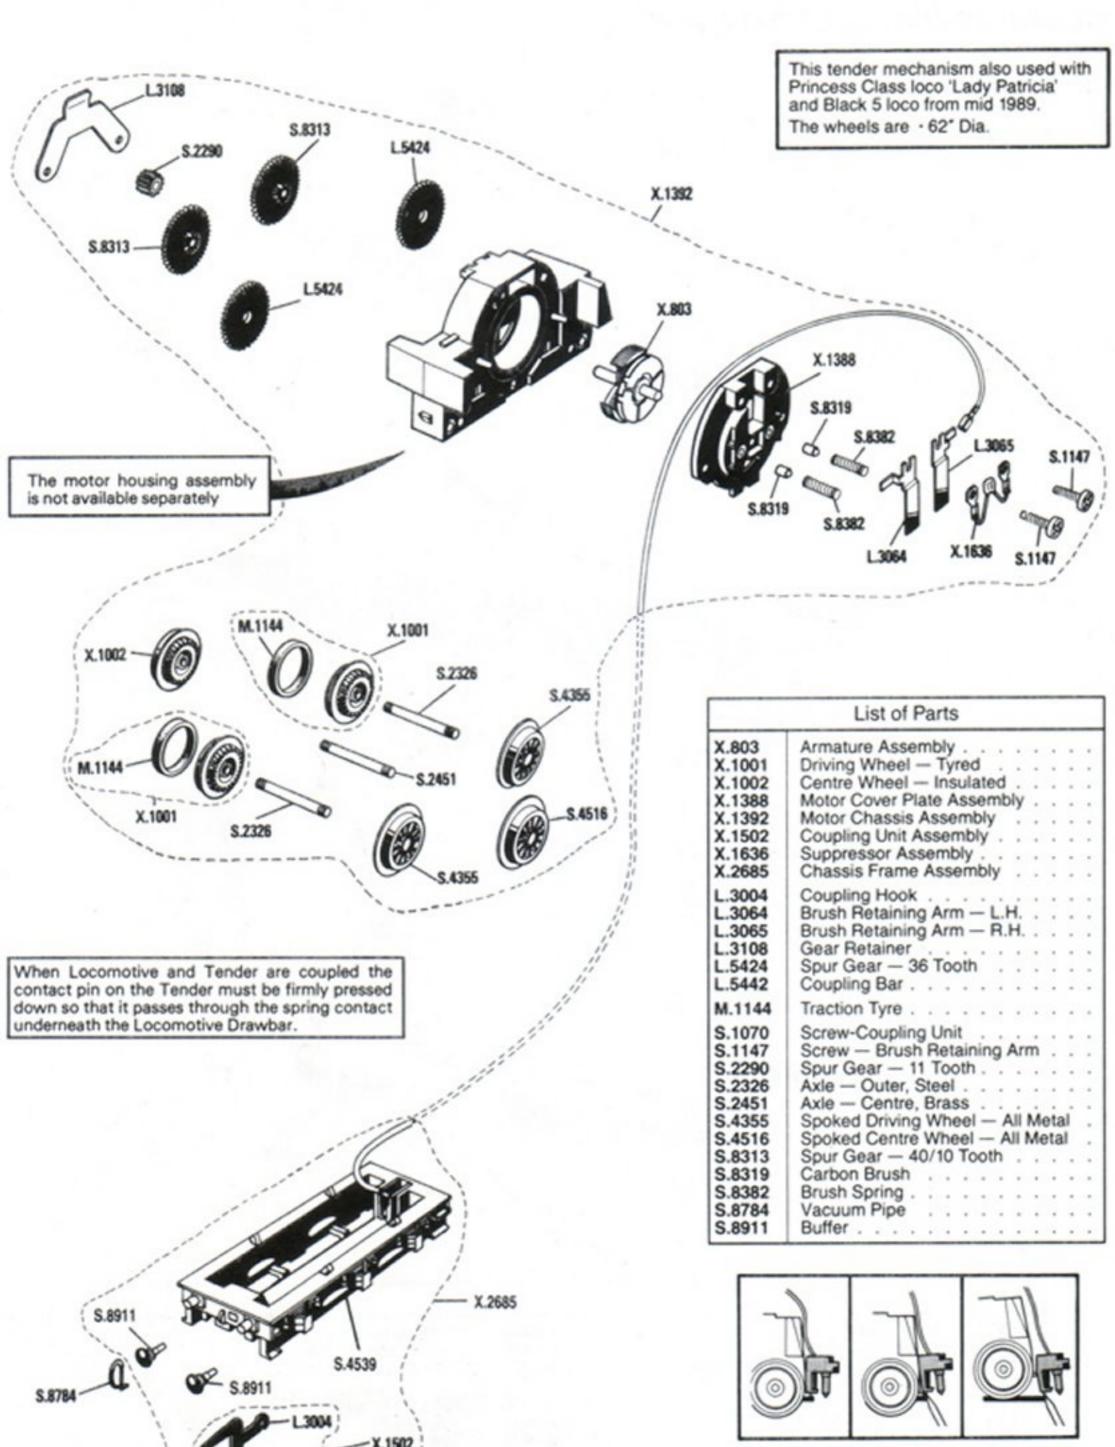

(X.1392), prise Coupling Pin forward with a small screwdriver, then press Motor Chassis Assembly out of the Chassis Frame. The Coupling Pin (shaded) cannot be removed from the

Chassis Frame.