


OVERHEAD POWER SUPPLY PARTS

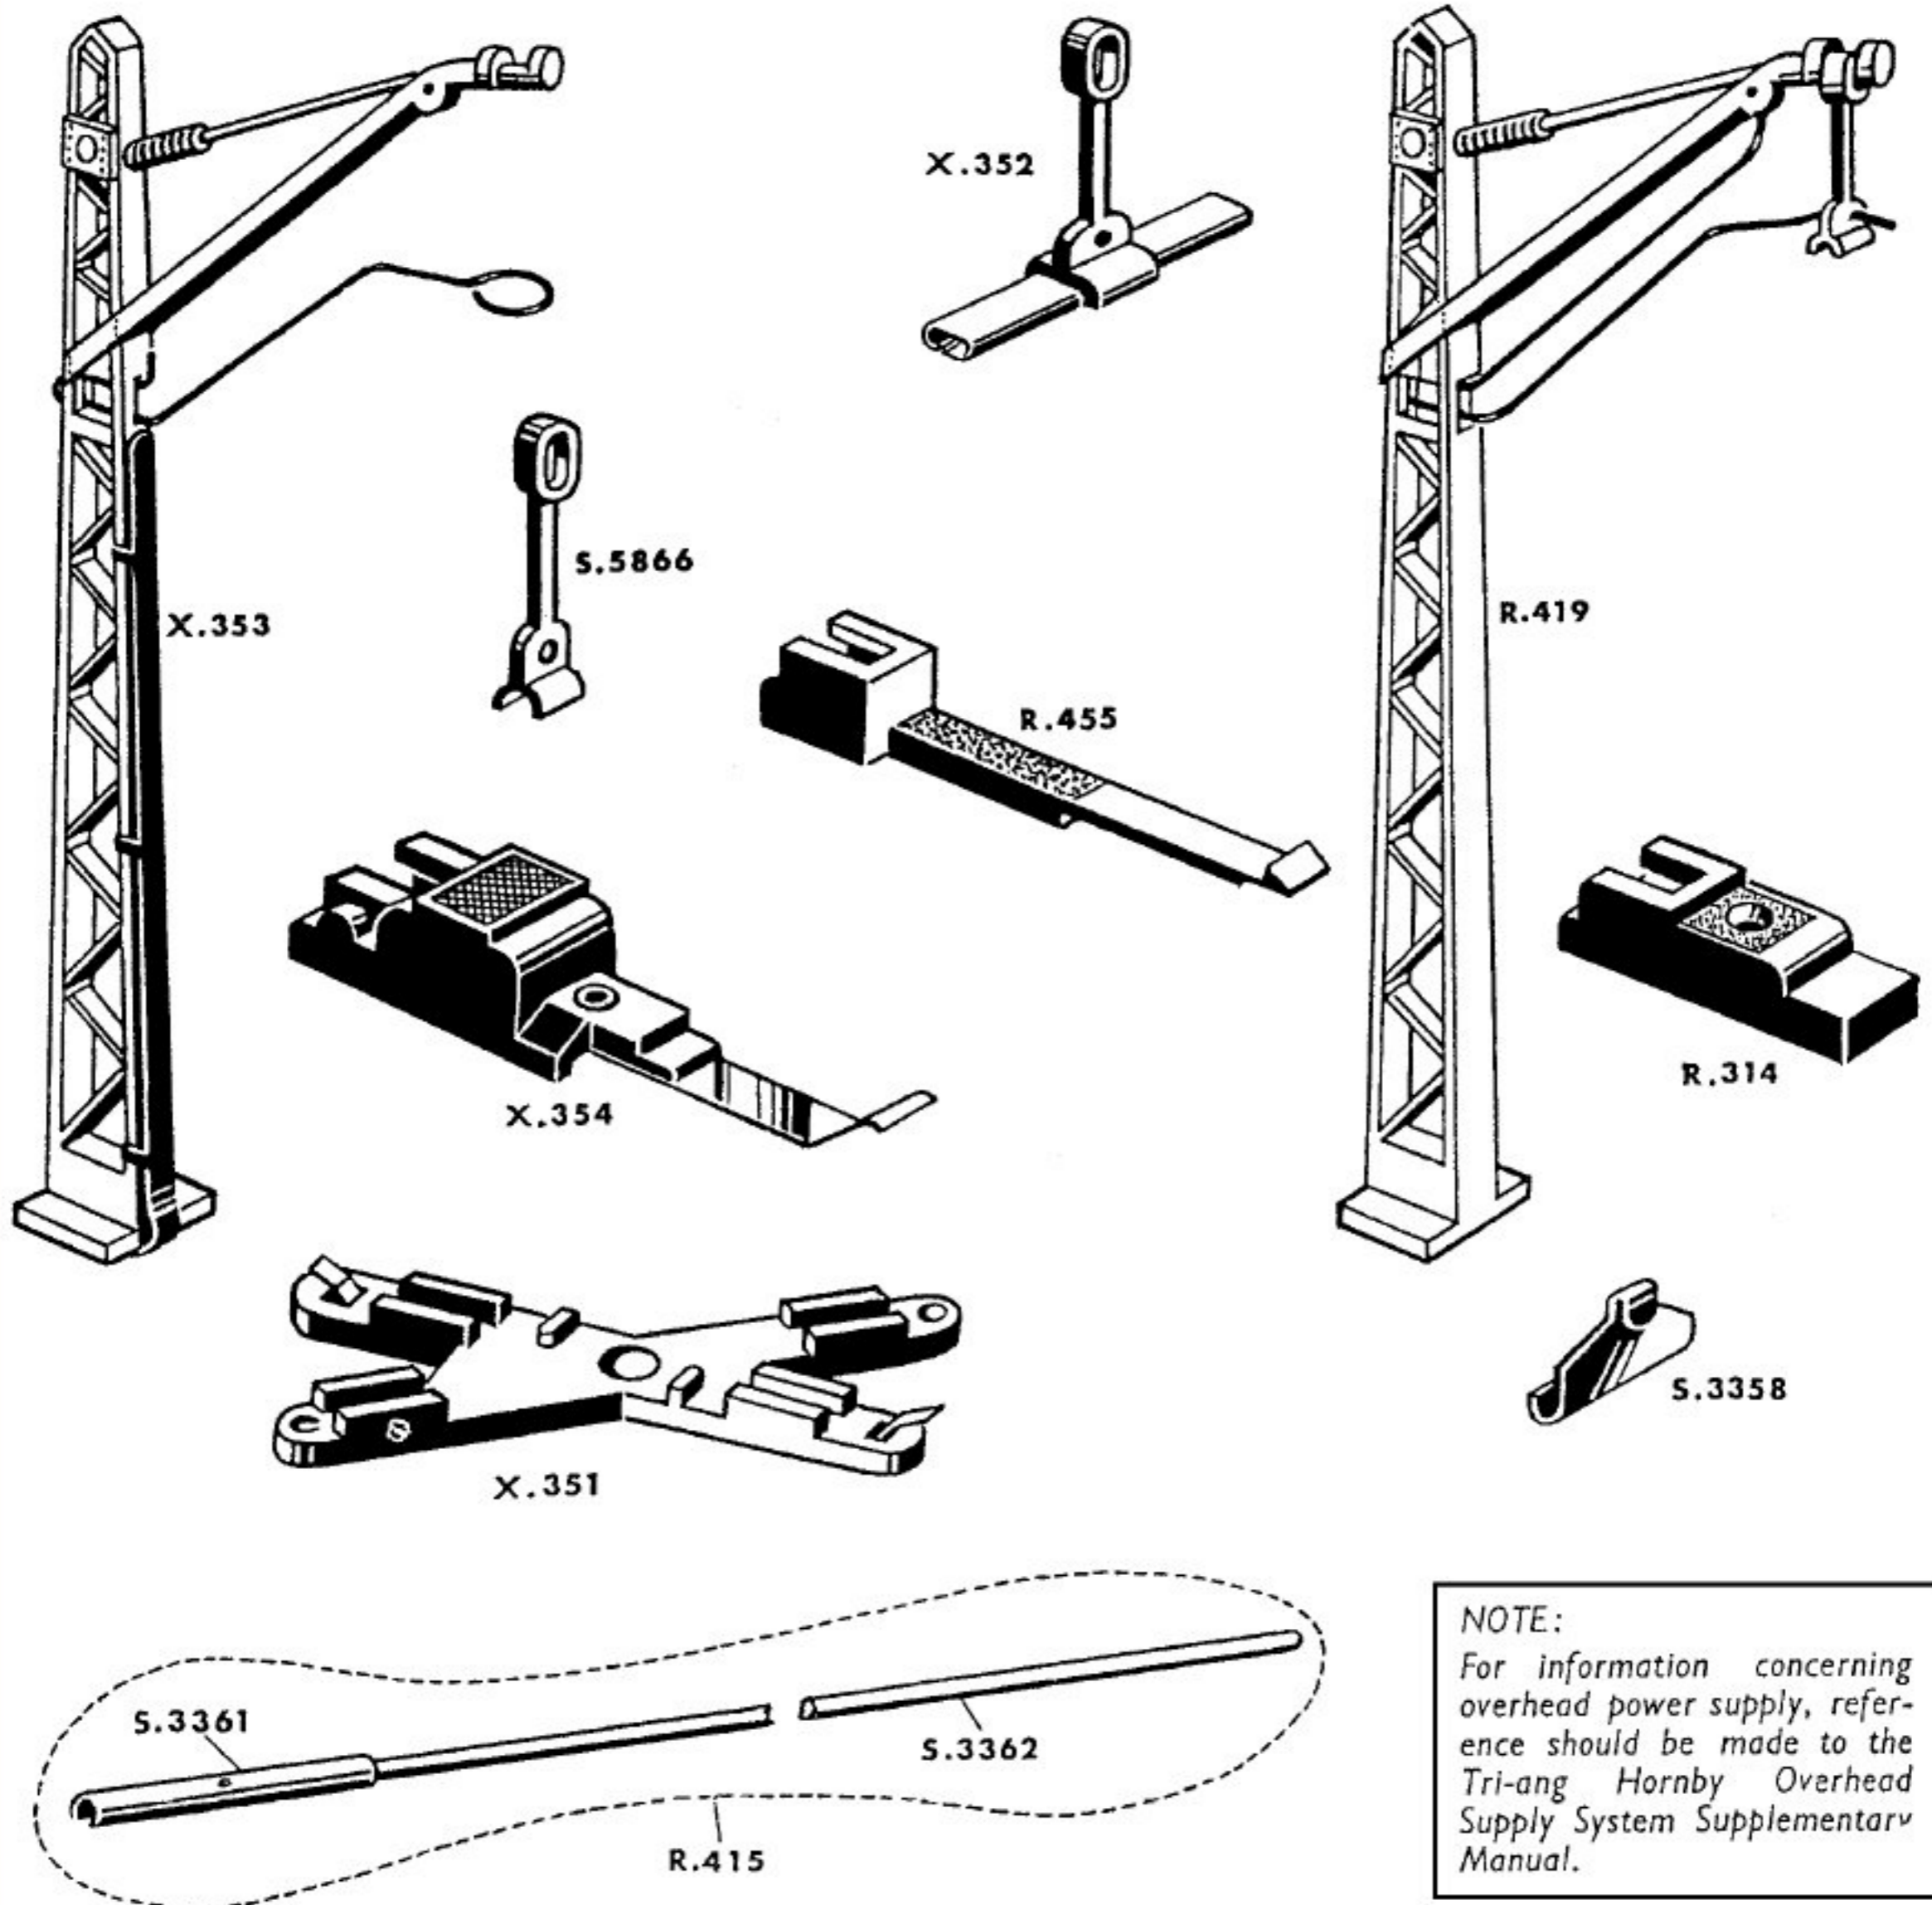

NOTE:
For information concerning overhead power supply, reference should be made to the Tri-ang Hornby Overhead Supply System Supplementary Manual.

- | | | |
|---|-------------------------------|---------------------------------|
| R.314 Mast Base (screw fixing type) | X.351 Overhead Diamond | S.3361 Overhead Wire Connecting |
| R.415 Catenary Wire with Clip 15" (38.1 cms.) | X.352 Junction Link with Clip | S.3362 Catenary Wire 15" |
| R.419 Single Track Mast with Link | X.353 Phase 2 Power Mast | S.5866 Mast Link |
| R.455 Mast Base Clip | X.354 Power Mast Base | |
| | S.3358 Catenary Adaptor | |

Modifications are made to Tri-ang Hornby models from time to time. If a spare part is required which does not coincide with the illustration, a full description should be given and, if necessary, a sketch or sample should accompany the order.

