


**2-6-0 LOCOMOTIVE CHASSIS - R.857, Ivatt Class 2**

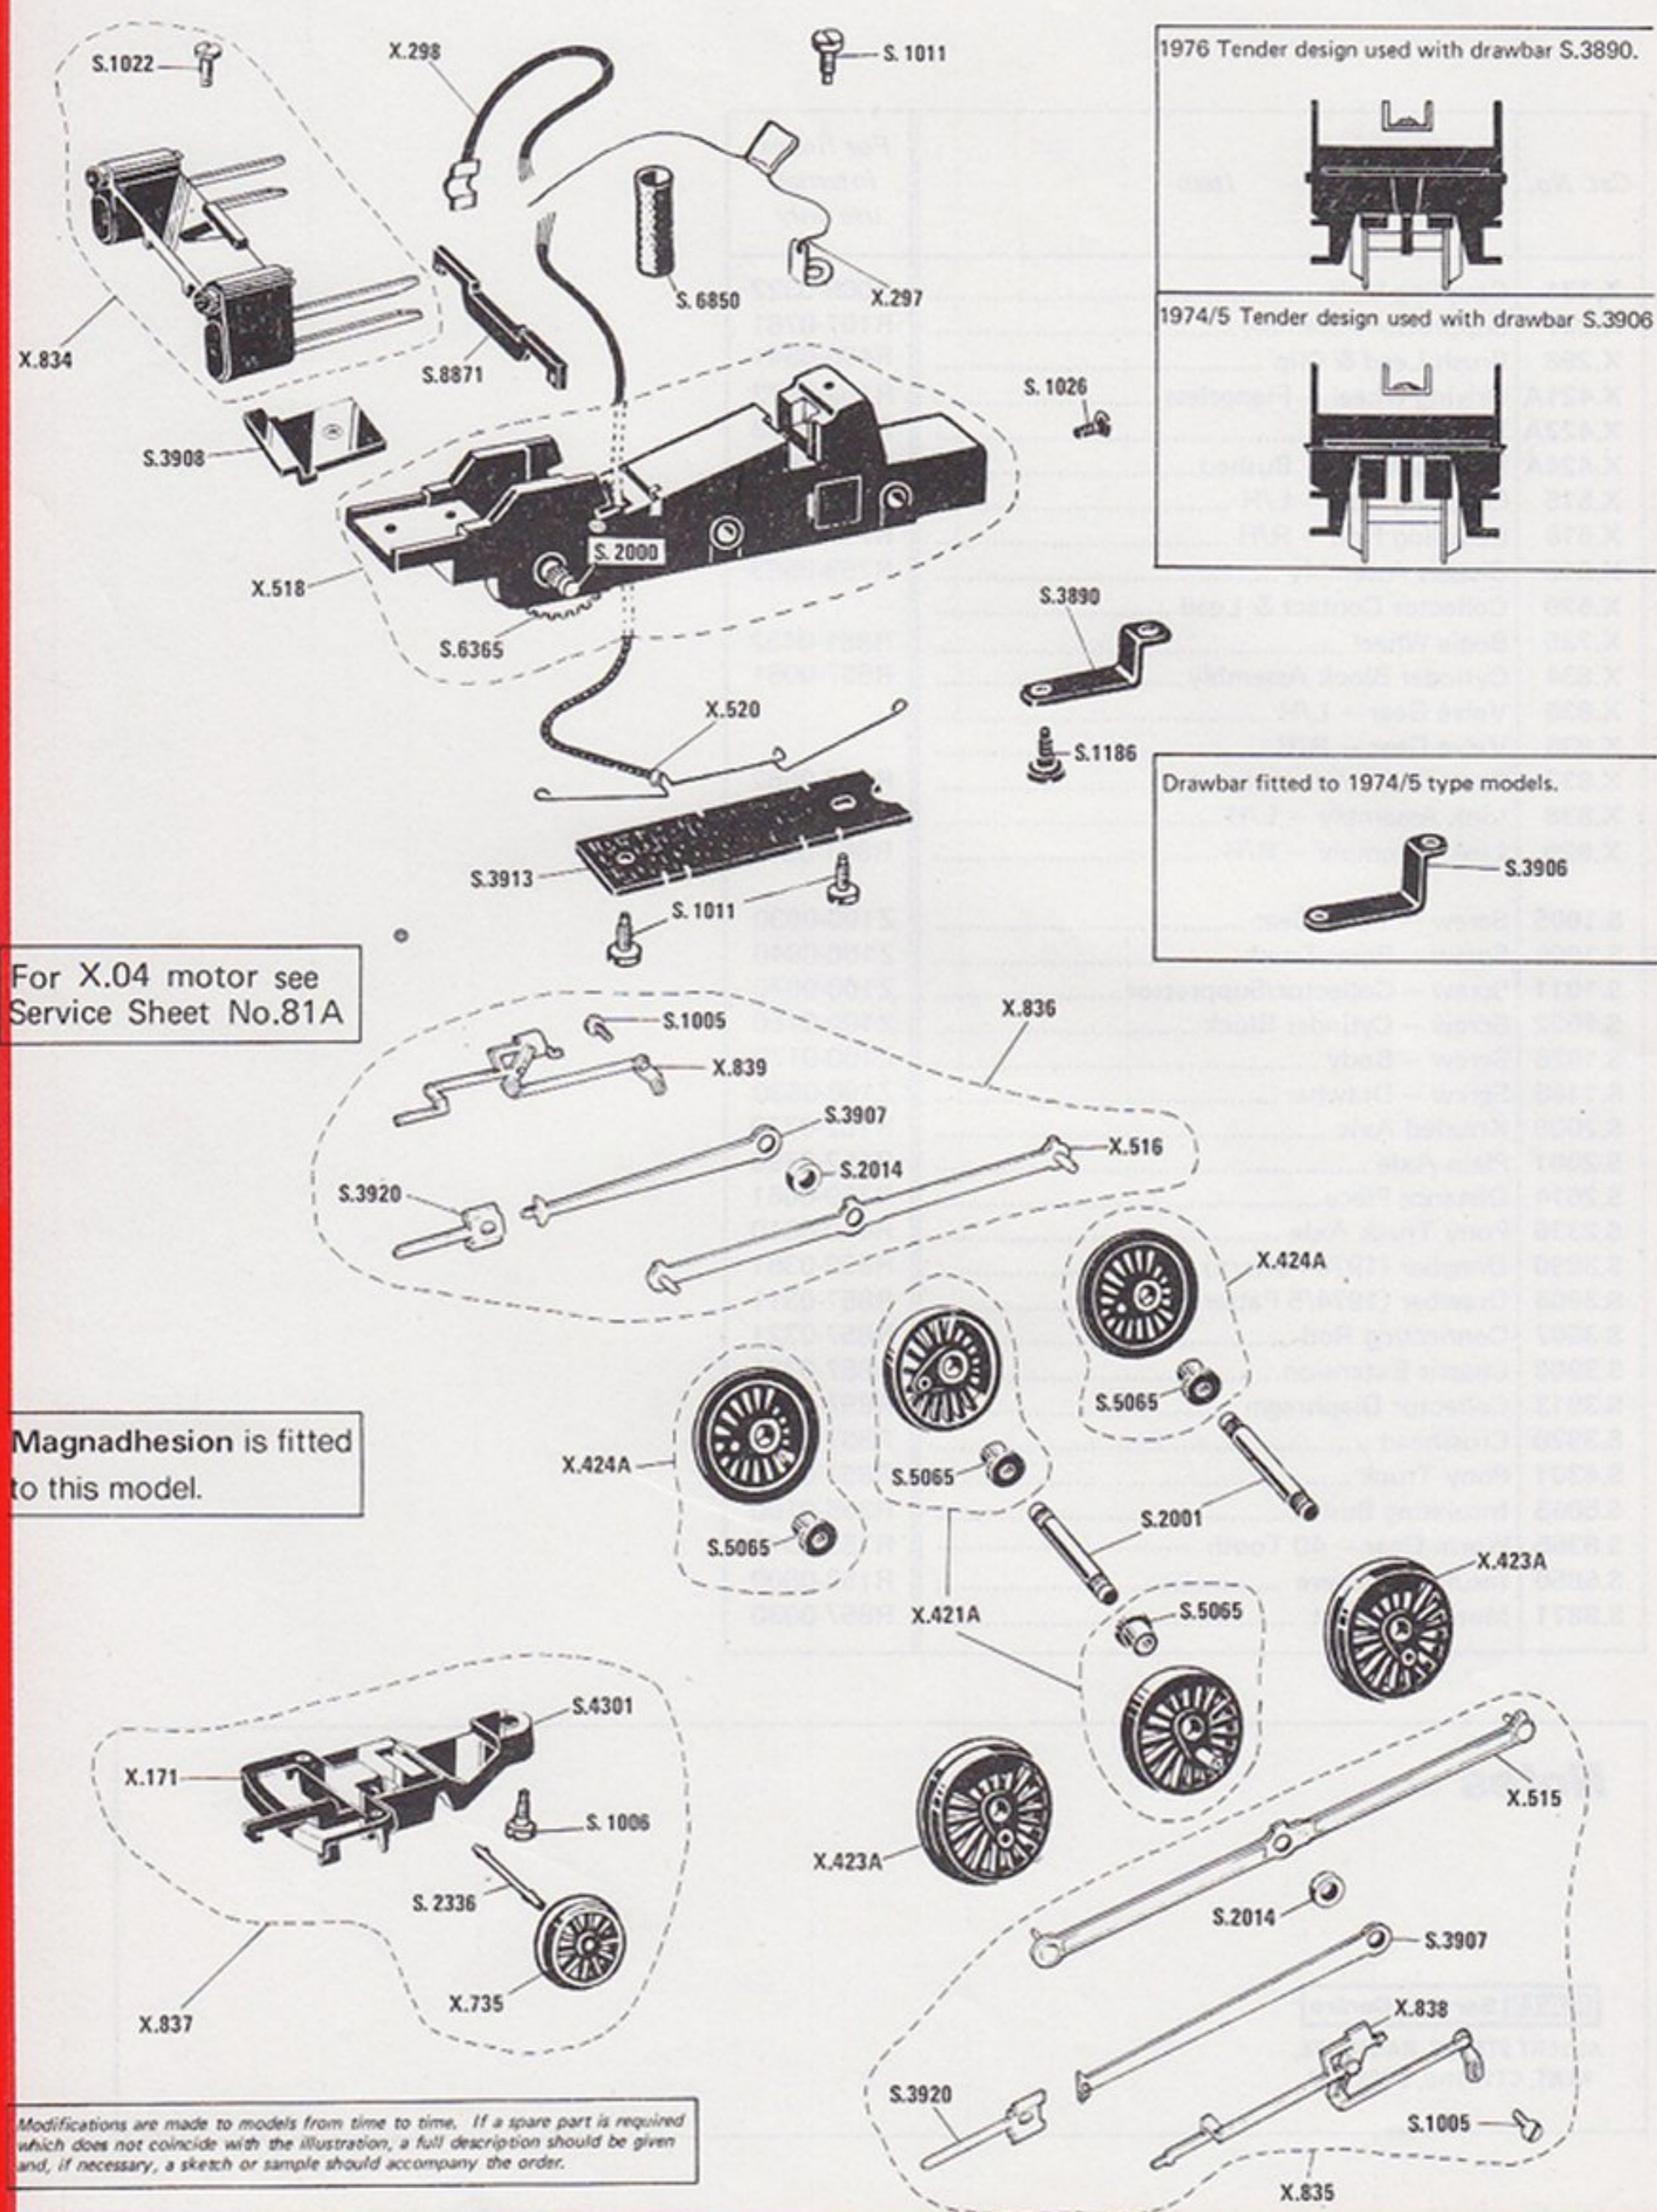

**ROVEX Service Centre** Albert Street, Ramsgate, Kent, CT11 9HD, England.

**SERVICE SHEET No.85**  
Issued September 1976

**List of Parts**

**2-6-0 LOCOMOTIVE CHASSIS - R.857, Ivatt Class 2**

Cat. No.	Item	For Rovex internal use only
X.171	Coupling Unit .....	R009-0322
X.297	Suppressor Assembly .....	R107-0781
X.298	Brush Lead & Clip .....	R408-0541
X.421A	Driving Wheel - Flangeless .....	R152-0573
X.423A	Driving Wheel .....	R041-0563
X.424A	Driving Wheel - Bushed .....	R041-0583
X.515	Coupling Rod - L/H .....	R759-0362
X.516	Coupling Rod - R/H .....	R759-0372
X.518	Chassis Assembly .....	R759-0593
X.520	Collector Contact & Lead .....	-
X.735	Bogie Wheel .....	R861-0432
X.834	Cylinder Block Assembly .....	R857-0061
X.835	Valve Gear - L/H .....	-
X.836	Valve Gear - R/H .....	-
X.837	Pony Truck Assembly .....	R857-0562
X.838	Link Assembly - L/H .....	R861-0313
X.839	Link Assembly - R/H .....	R861-0312
S.1005	Screw - Valve Gear .....	Z100-0030
S.1006	Screw - Pony Truck .....	Z100-0040
S.1011	Screw - Collector/Suppressor .....	Z100-0070
S.1022	Screw - Cylinder Block .....	Z100-0150
S.1026	Screw - Body .....	Z100-0170
S.1186	Screw - Drawbar .....	Z100-0530
S.2000	Knurled Axle .....	R152-0770
S.2001	Plain Axle .....	R152-0790
S.2014	Distance Piece .....	R759-0661
S.2336	Pony Truck Axle .....	R450-0810
S.3890	Drawbar (1976 Pattern) .....	R859-0381
S.3906	Drawbar (1974/5 Pattern) .....	R857-0311
S.3907	Connecting Rod .....	R857-0321
S.3908	Chassis Extension .....	R857-0331
S.3913	Collector Diaphragm .....	R857-0760
S.3920	Crosshead .....	R857-0351
S.4301	Pony Truck .....	R857-0561
S.5065	Insulating Bush .....	R355-0100
S.6365	Worm Gear - 40 Tooth .....	R152-0010
S.6850	Insulating Sleeve .....	R152-0800
S.8871	Motion Bracket .....	R857-0030

**Notes**

**ROVEX Service Centre**  
ALBERT STREET, RAMSGATE,  
KENT, CT11 9HD, ENGLAND.