


2-6-0 B.R. IVATT CLASS 2 LOCOMOTIVE—R.852

Most parts also suitable for R.857

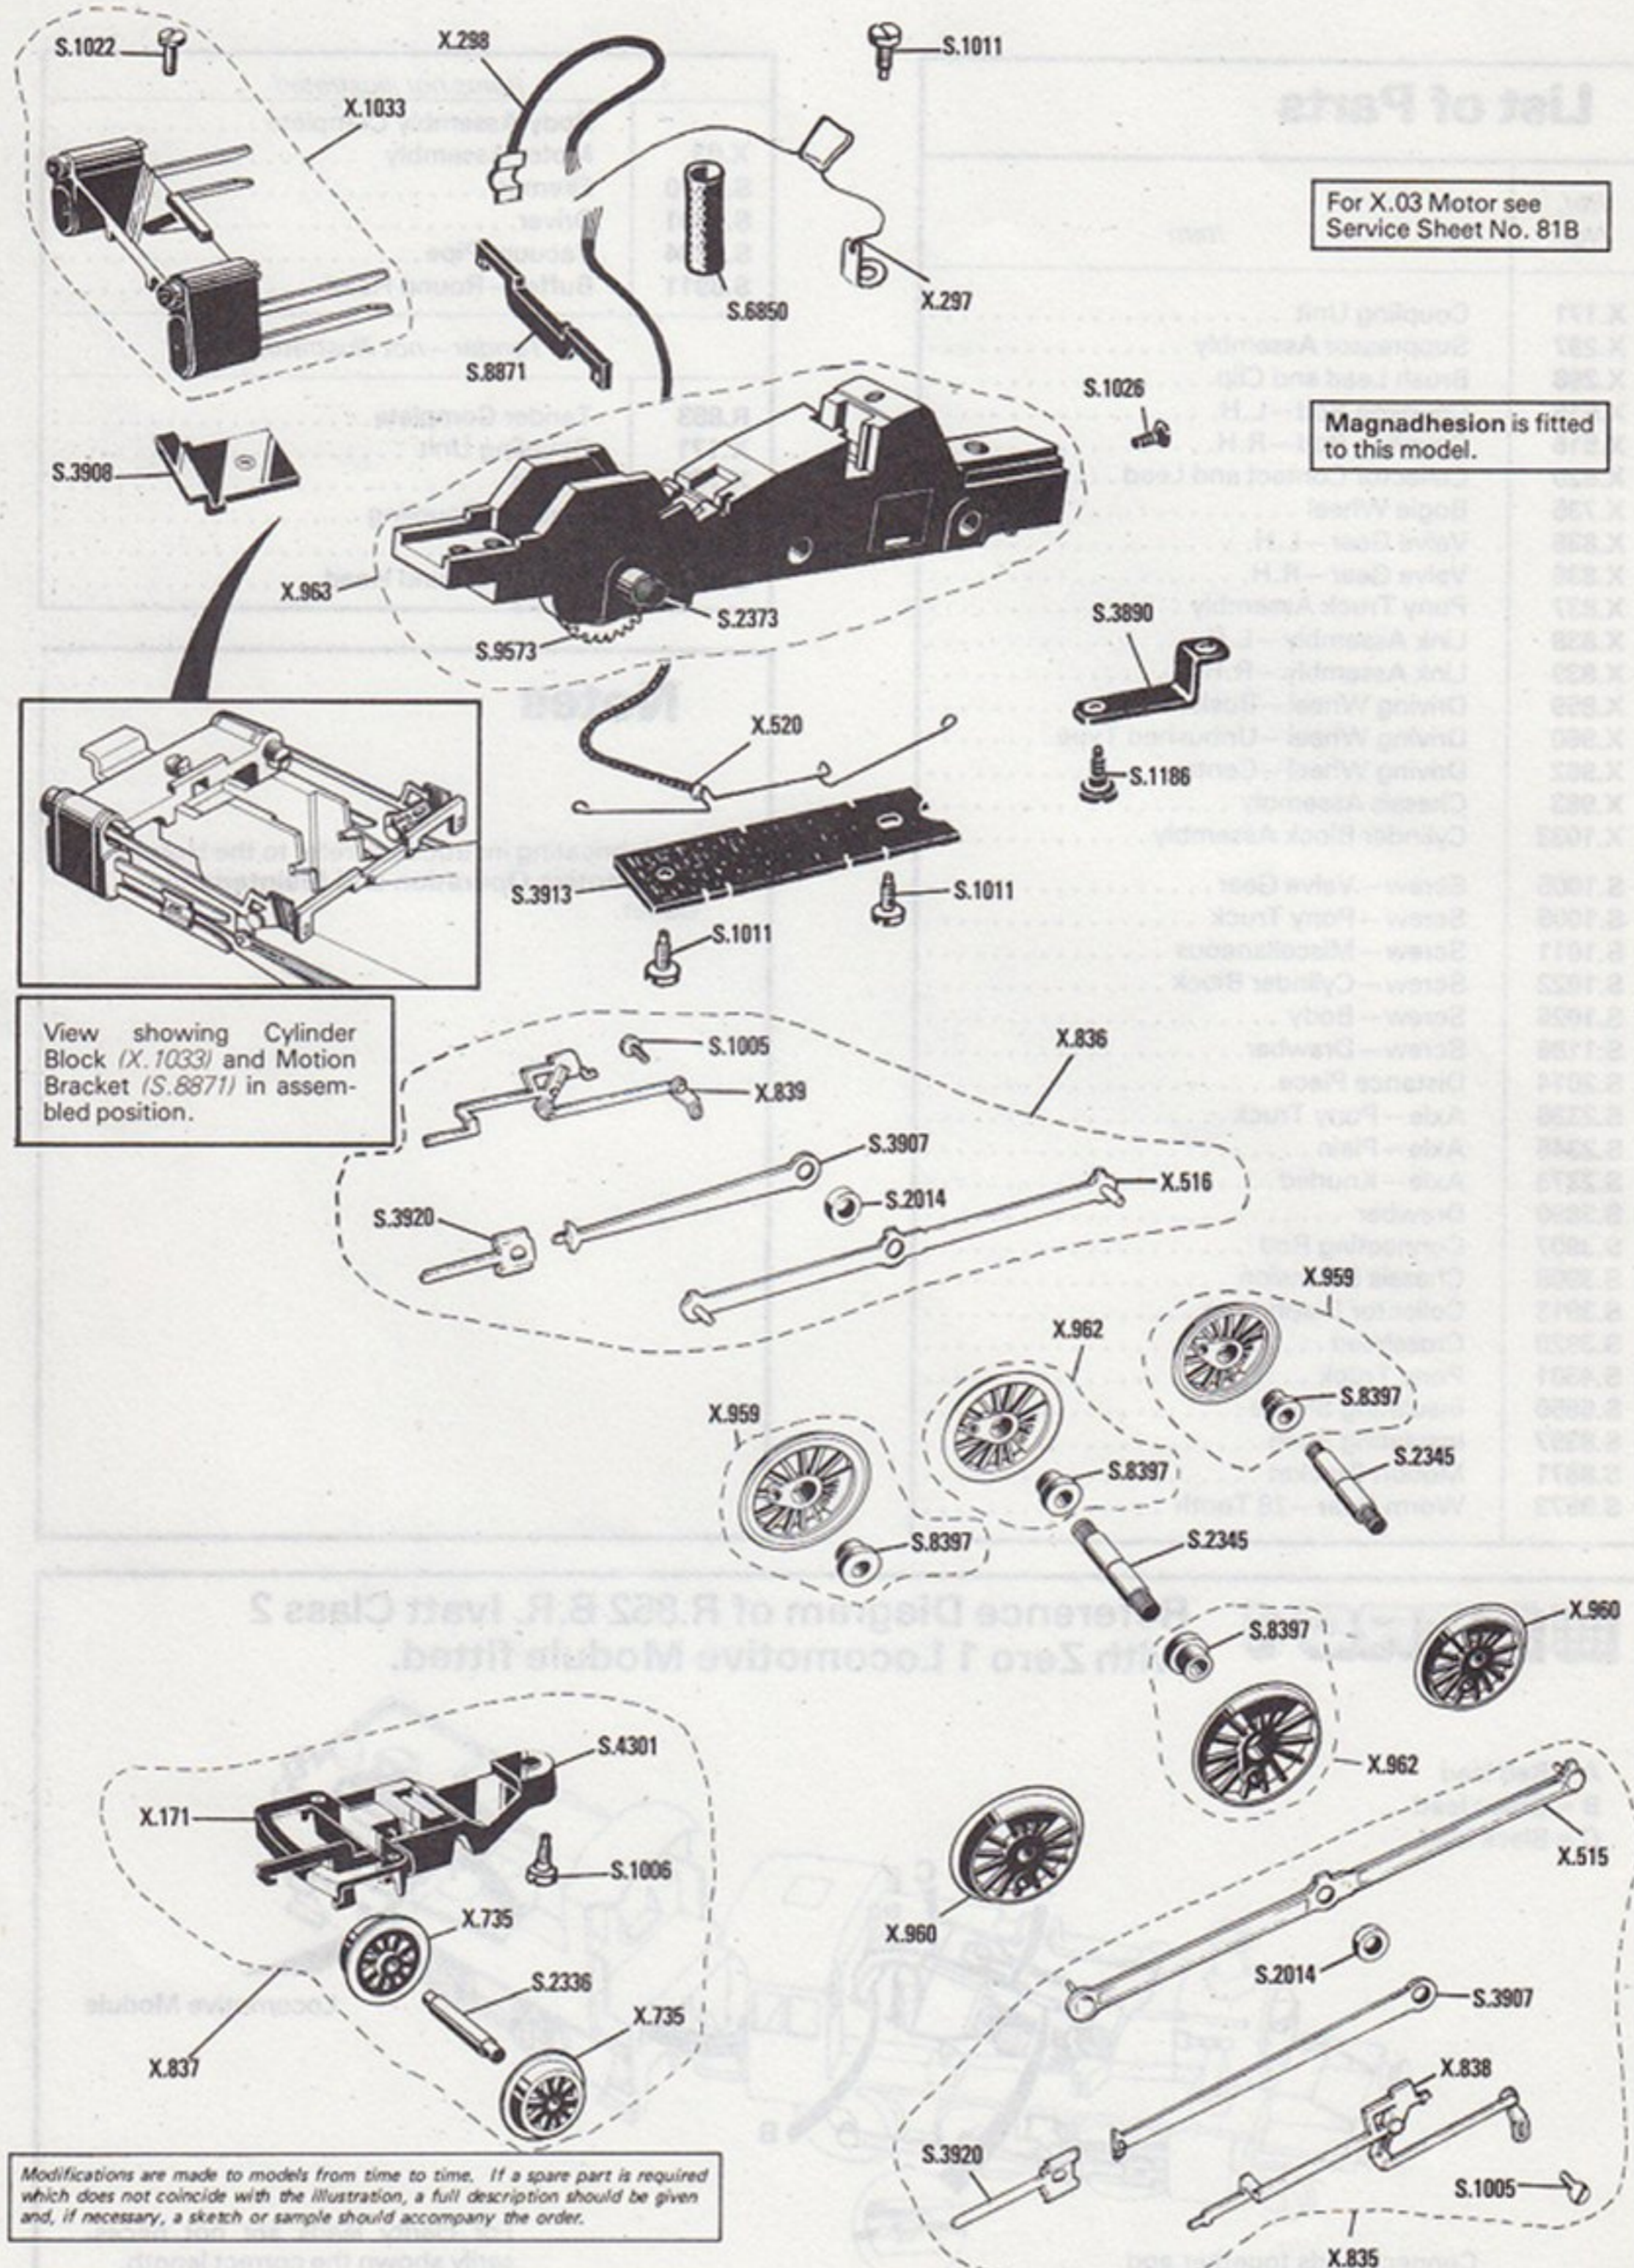

ROVEX Service Centre Albert Street, Ramsgate, Kent, CT11 9HD, England.

SERVICE SHEET No. 85A
 Issued August 1980
 Supersedes Sheet No. 85

2-6-0 B.R. IVATT CLASS 2 LOCOMOTIVE—R.852

Most parts also suitable for R.857

List of Parts	
Ref. No.	Item
X.171	Coupling Unit
X.297	Suppressor Assembly
X.298	Brush Lead and Clip
X.515	Coupling Rod—L.H.
X.516	Coupling Rod—R.H.
X.520	Collector Contact and Lead
X.735	Bogie Wheel
X.835	Valve Gear—L.H.
X.836	Valve Gear—R.H.
X.837	Pony Truck Assembly
X.838	Link Assembly—L.H.
X.839	Link Assembly—R.H.
X.959	Driving Wheel—Bushed
X.960	Driving Wheel—Unbushed Type
X.962	Driving Wheel—Centre
X.963	Chassis Assembly
X.1033	Cylinder Block Assembly
S.1005	Screw—Valve Gear
S.1006	Screw—Pony Truck
S.1011	Screw—Miscellaneous
S.1022	Screw—Cylinder Block
S.1026	Screw—Body
S.1186	Screw—Drawbar
S.2014	Distance Piece
S.2336	Axle—Pony Truck
S.2345	Axle—Plain
S.2373	Axle—Knurled
S.3890	Drawbar
S.3907	Connecting Rod
S.3908	Chassis Extension
S.3913	Collector Diaphragm
S.3920	Crosshead
S.4301	Pony Truck
S.6850	Insulating Sleeve
S.8397	Insulating Bush
S.8871	Motion Bracket
S.9573	Worm Gear—28 Tooth

Items not illustrated	
X.03	Body Assembly Complete
S.6390	Motor Assembly
S.6391	Fireman
S.8784	Driver
S.8911	Vacuum Pipe
S.8911	Buffer—Round Head

Tender—not illustrated	
R.853	Tender Complete
X.171	Coupling Unit
X.736	Wheel
S.1070	Screw—Coupling
S.2185	Axle
S.8911	Buffer—Round Head

Notes

For lubricating instructions refer to the Hornby Locomotive Operation and Maintenance leaflet.

