


4-6-0 LOCOMOTIVE CHASSIS - R.078, "King Edward 1"

Powered by Tender Drive
See Service Sheet No. 104

When Locomotive and Tender are coupled the contact pin on the Tender must be firmly pressed down so that it passes through the spring contact underneath the Locomotive Drawbar.

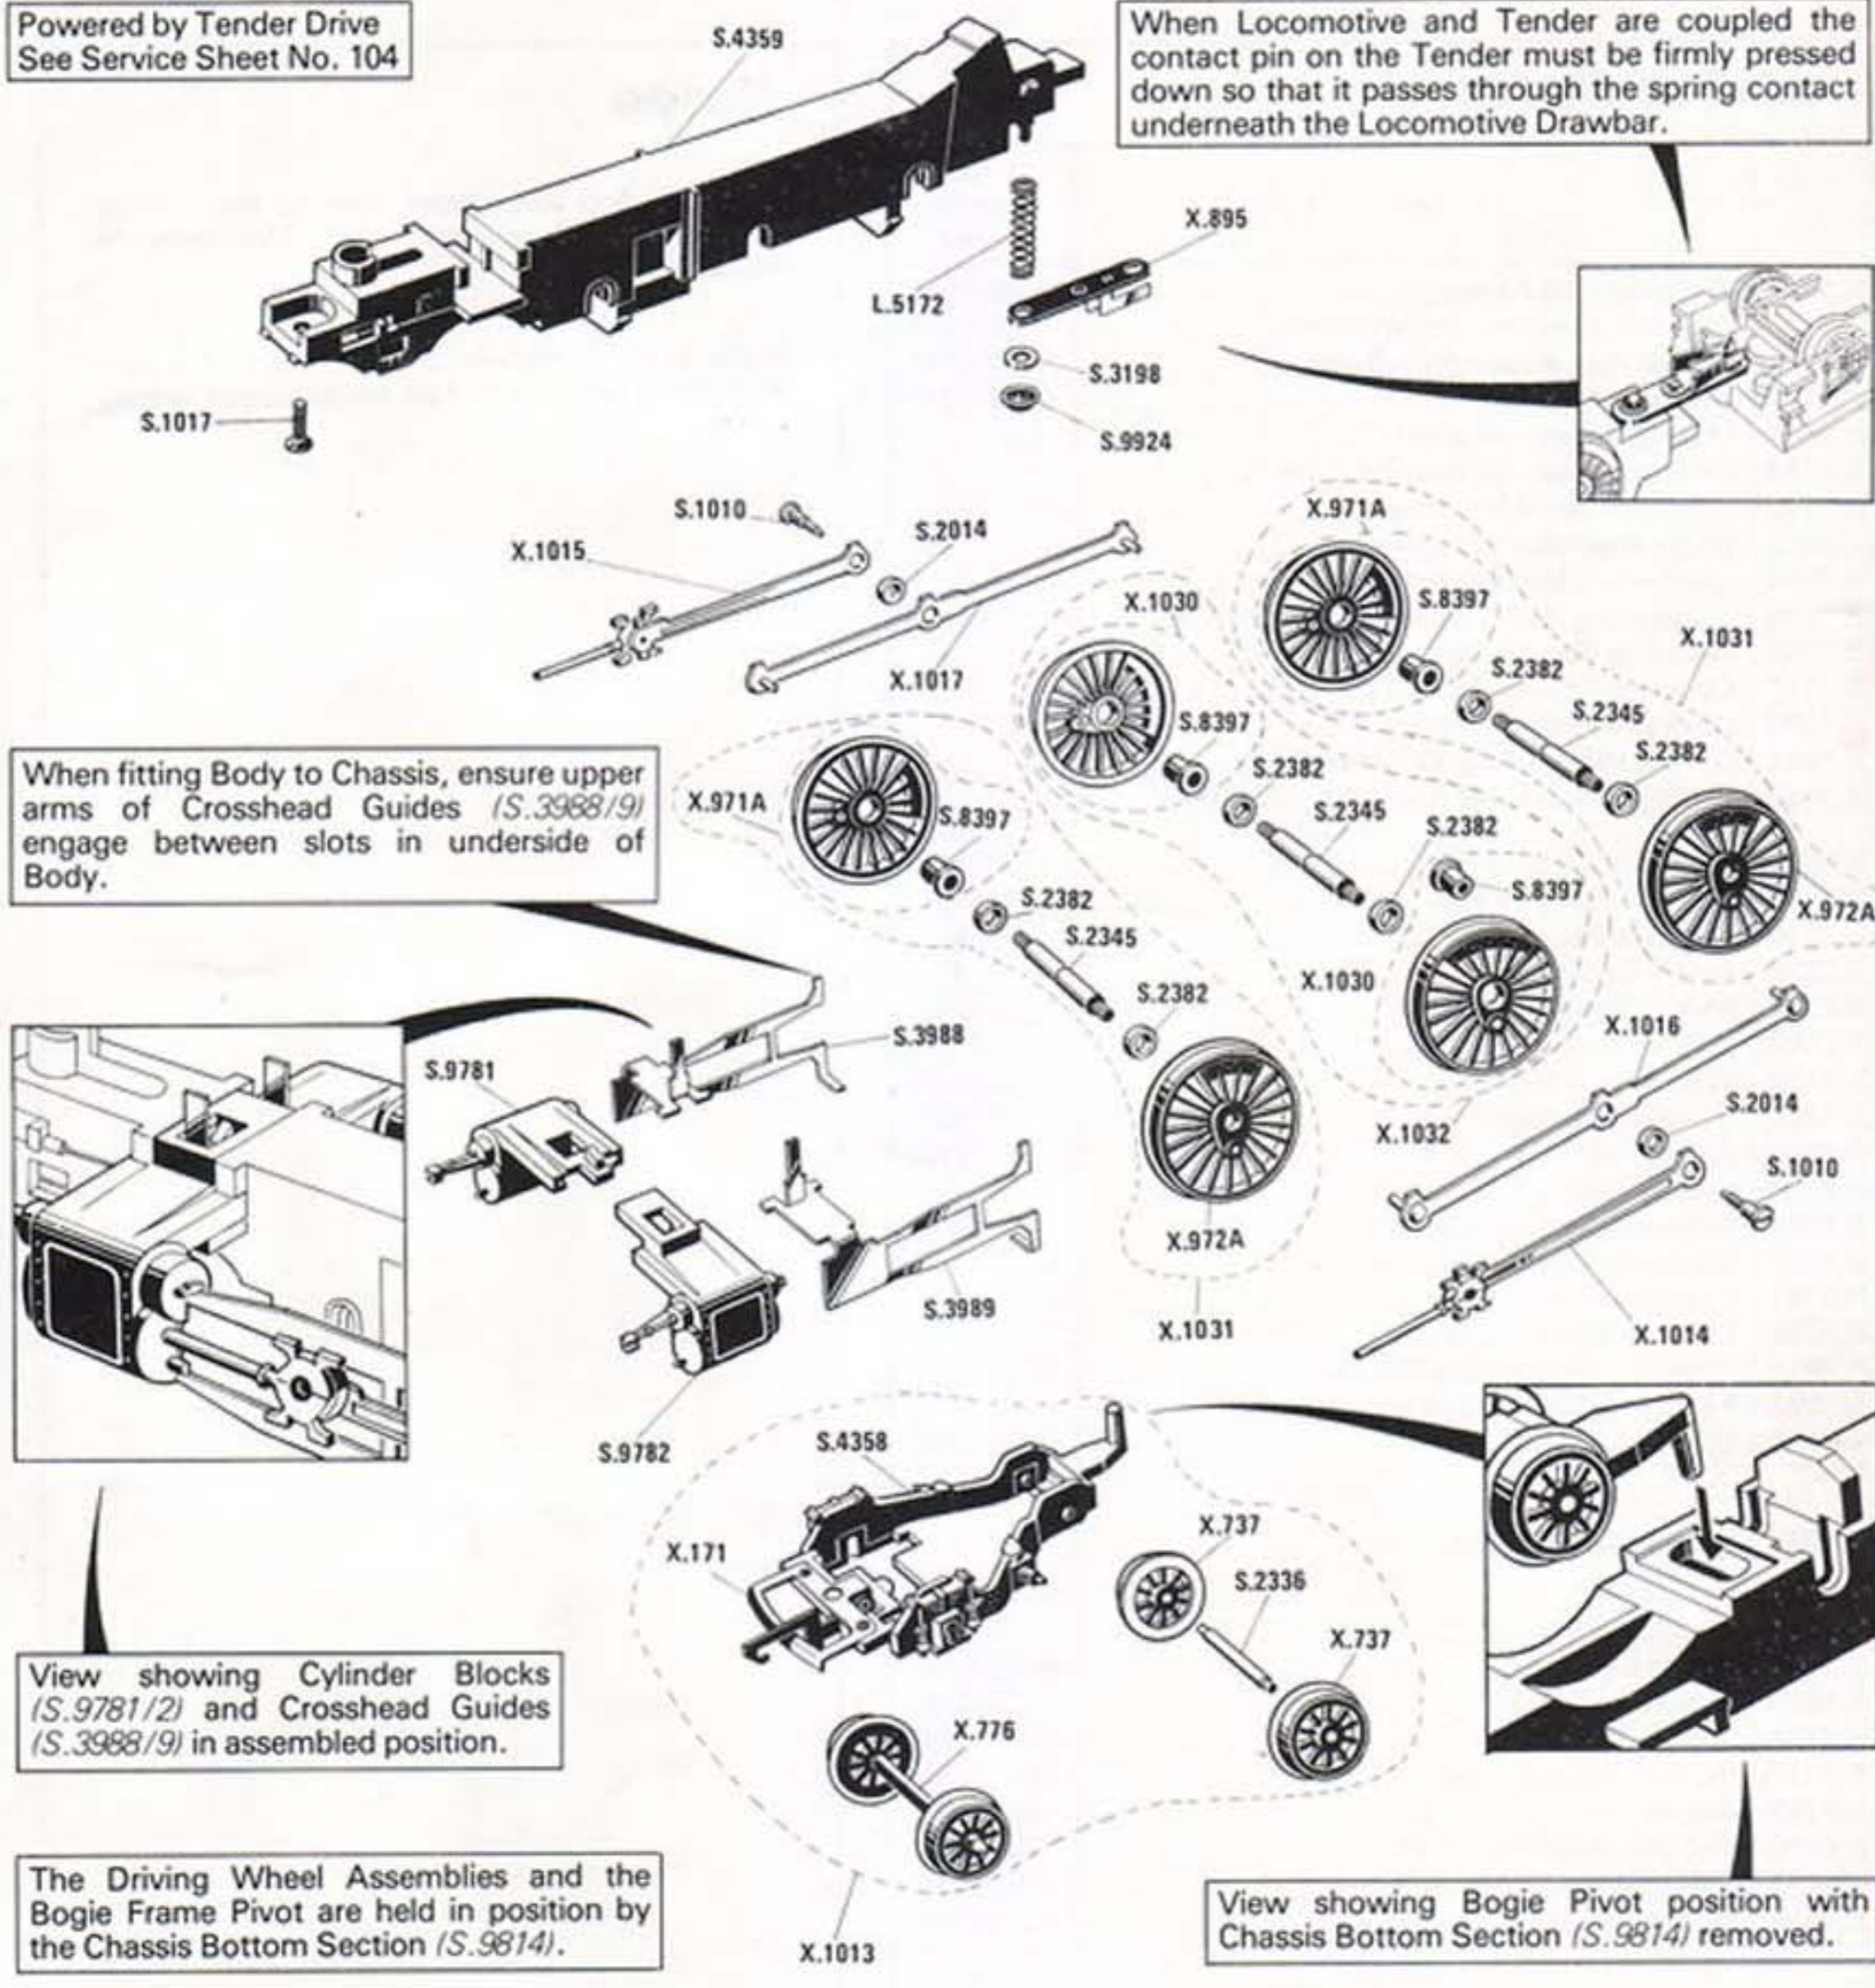

The Chassis Top and Bottom Sections (S.4359 & S.9814) clip-fit together. To dismantle insert a small screwdriver at the front end and ease bottom off clips, then pull firmly apart.

Modifications are made to models from time to time. If a spare part is required which does not coincide with the illustration, a full description should be given and, if necessary, a sketch or sample should accompany the order.

ROVEX Service Centre Albert Street, Ramsgate, Kent, CT11 9HD, England.

SERVICE SHEET No.112
Issued September 1978

4-6-0 LOCOMOTIVE CHASSIS - R.078, "King Edward 1"

List of Parts

Cat. No.	Item	For Rovex internal use only
X.171	Coupling Unit Assembly	R009-0322
X.737	Wheel Assembly—Bogie	Z400-0231
X.776	Wheel/Axle Assembly—Bogie	R090-0771
X.895	Drawbar Assembly	R061-0312
X.971A	Driving Wheel—Bushed	
X.972A	Driving Wheel—Unbushed Type	
X.1012	Chassis Assembly Complete	
X.1013	Bogie Assembly Complete	
X.1014	Connecting Rod/Piston Assembly—L.H.	
X.1015	Connecting Rod/Piston Assembly—R.H.	
X.1016	Coupling Rod—L.H.	
X.1017	Coupling Rod—R.H.	
X.1030	Driving Wheel—Centre	
X.1031	Driving Wheel/Axle Assembly	
X.1032	Driving Wheel/Axle Assembly—Centre	
S.1010	Screw—Coupling Rod	Z100-0060
S.1017	Screw—Body Fixing	Z100-0120
S.2014	Distance Piece	R759-0661
S.2336	Axle—Bogie	R450-0810
S.2345	Axle—Driving Wheel	R859-0760
S.2382	Axle Bearing	R052-0630
S.3198	Washer—Drawbar	R078-0700
S.3988	Crosshead Guide—R.H.	R078-0330
S.3989	Crosshead Guide—L.H.	R078-0340
S.4358	Bogie Chassis	R078-0570
S.4359	Chassis—Top Section	R078-0560
S.8397	Insulating Bush	R910-0010
S.9781	Cylinder Block—R.H.	R078-0070
S.9782	Cylinder Block—L.H.	R078-0080
S.9814	Chassis—Bottom Section	R078-0090
S.9924	Retaining Clip—Drawbar	C705-0700
L.5172	Spring	R078-0740
<i>Items not illustrated</i>		
X.1018	Body Assembly Complete	
S.2219	Whistle	R759-0670
S.2383	Funnel Cap	R078-0660
S.3990	Reversing Lever	R078-0350
S.6623	Handrail—Cab	R759-0790
S.8784	Vacuum Pipe	R859-0030
S.8911	Buffer—Round Head	R041-0070
S.9783	Nameplate	R078-0020
S.9810	Cab Window Unit—L.H.	R078-0030
S.9811	Cab Window Unit—R.H.	R078-0040
S.9818	Handrail with Stanchions	R078-0100
<i>Tender</i>		
R.079	Tender Assembly Complete	
S.9778	Tender Body	R079-0010

For other Tender Parts see Service Sheet No. 104

Notes

For lubricating instructions refer to the Hornby Locomotive Operation and Maintenance leaflet.

Prefix L for components is the start of a new numbering series and has no particular significance.

ROVEX Service Centre
ALBERT STREET, RAMSGATE,
KENT, CT11 9HD, ENGLAND.