
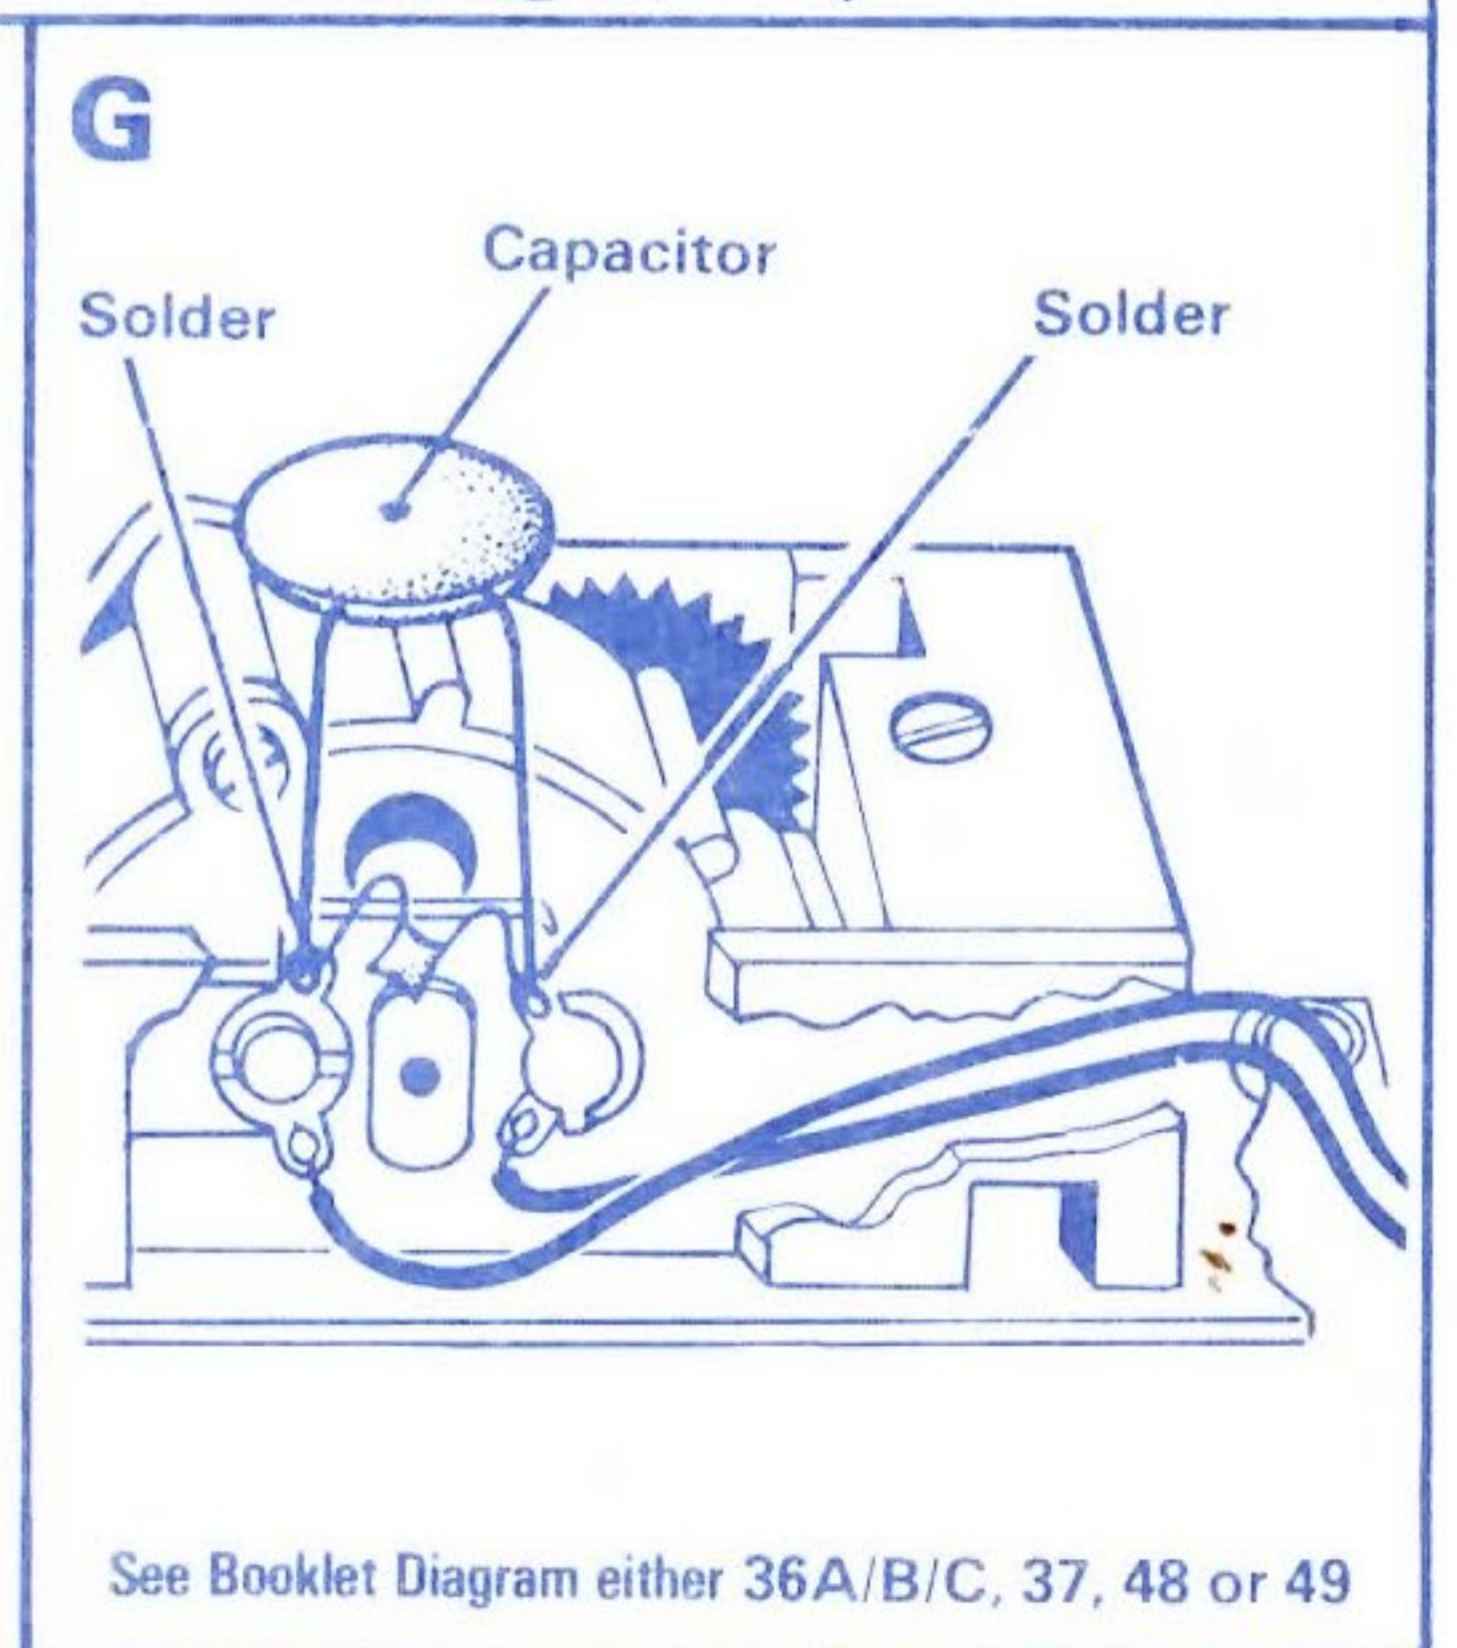
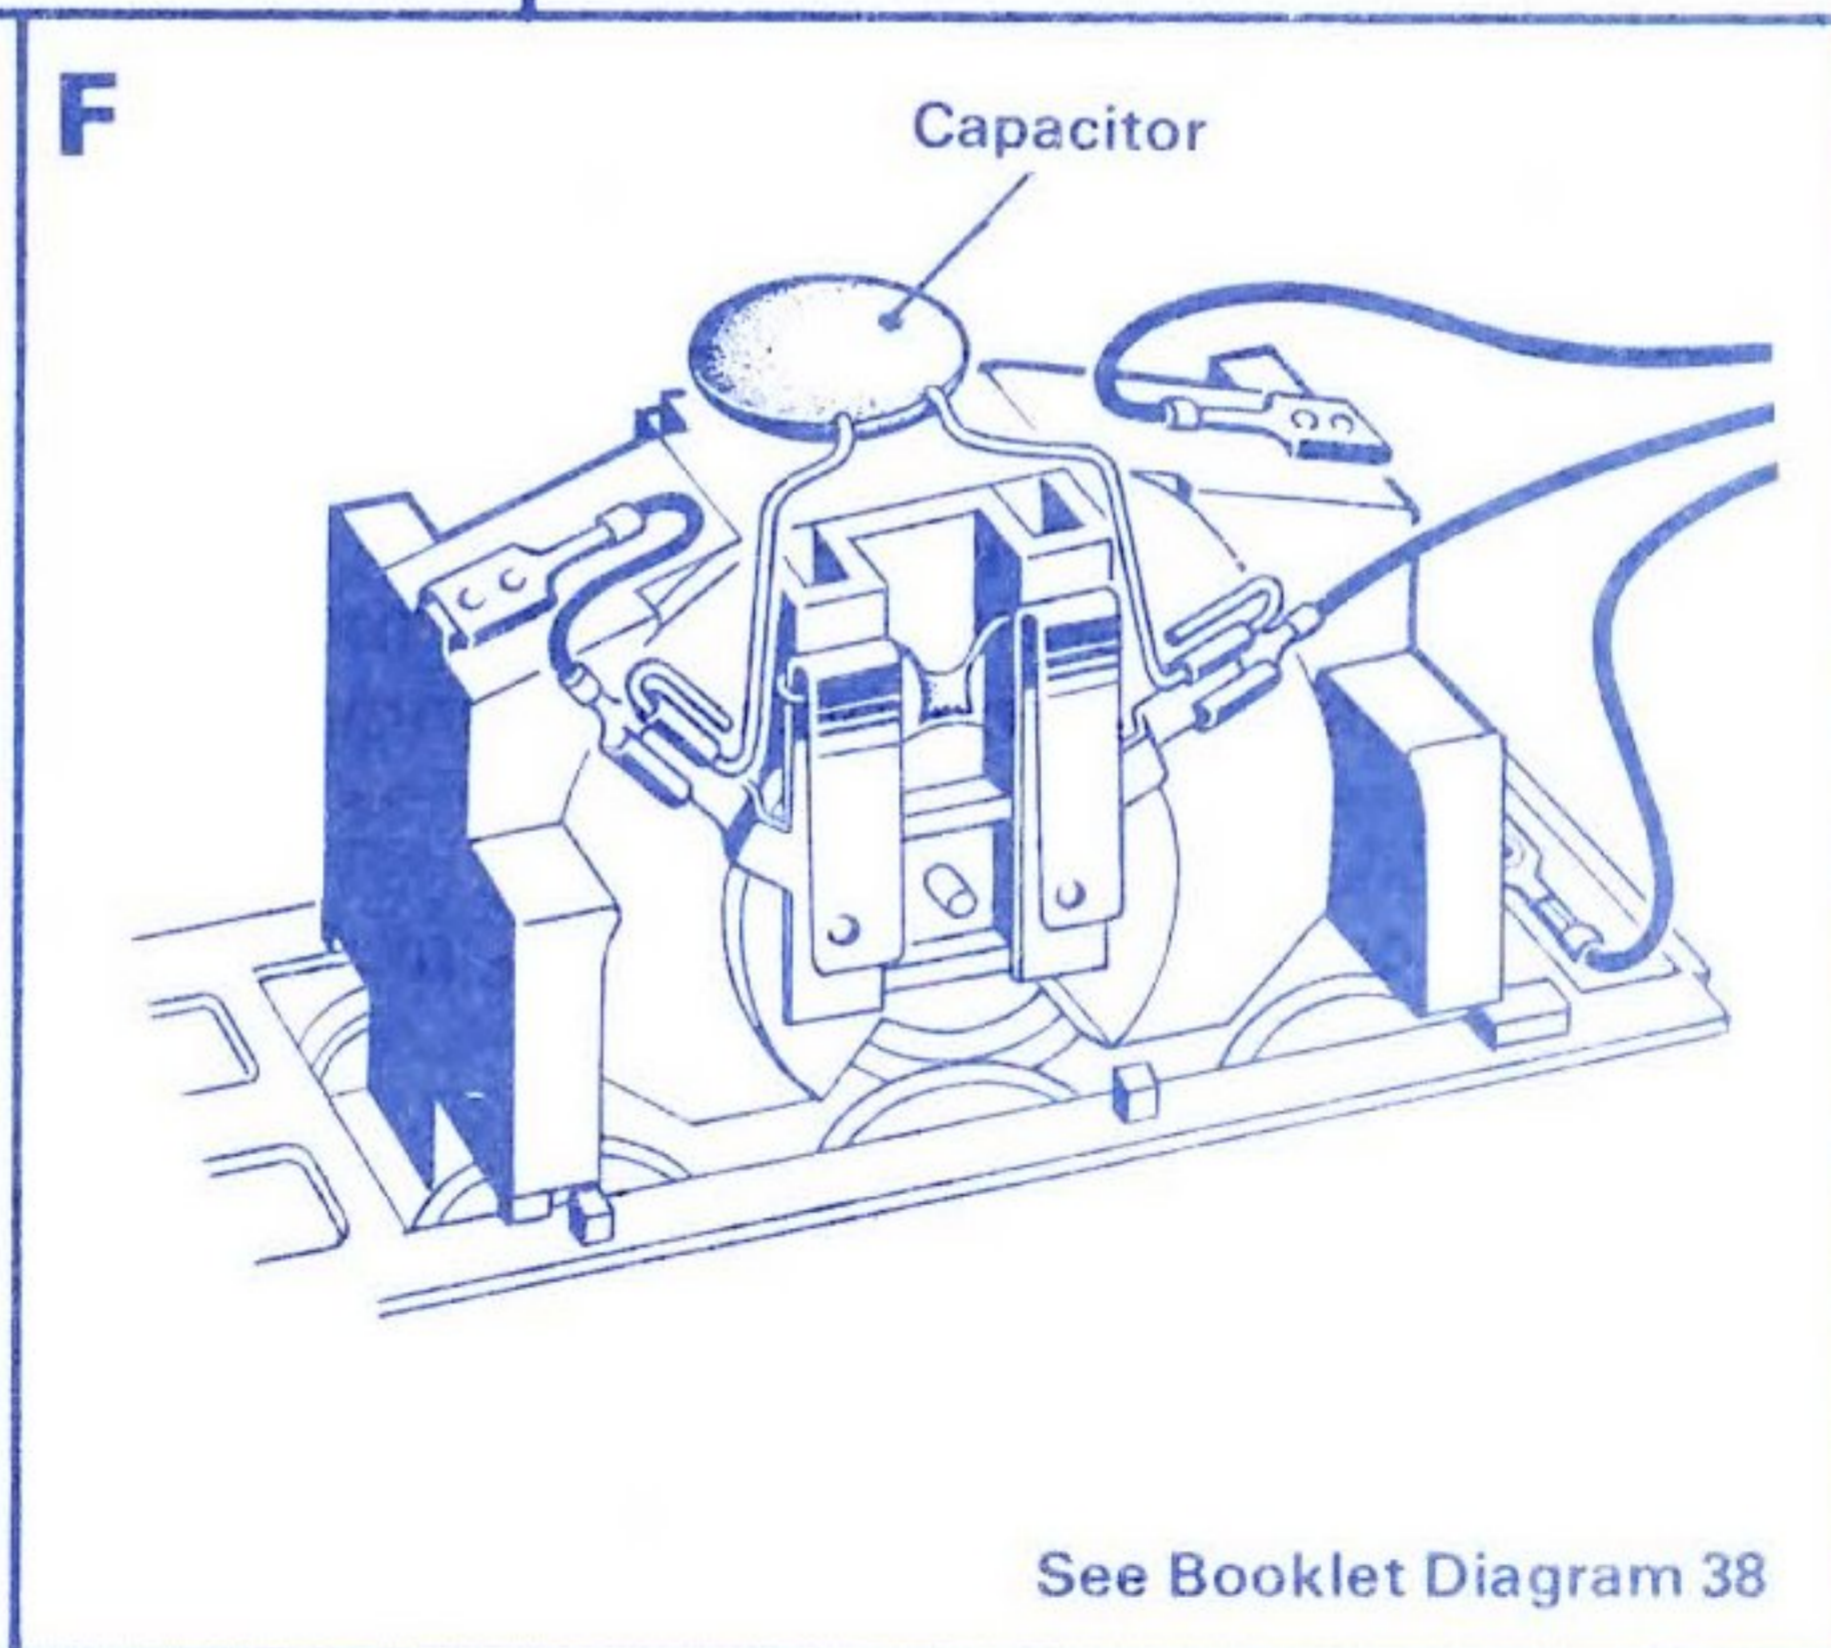
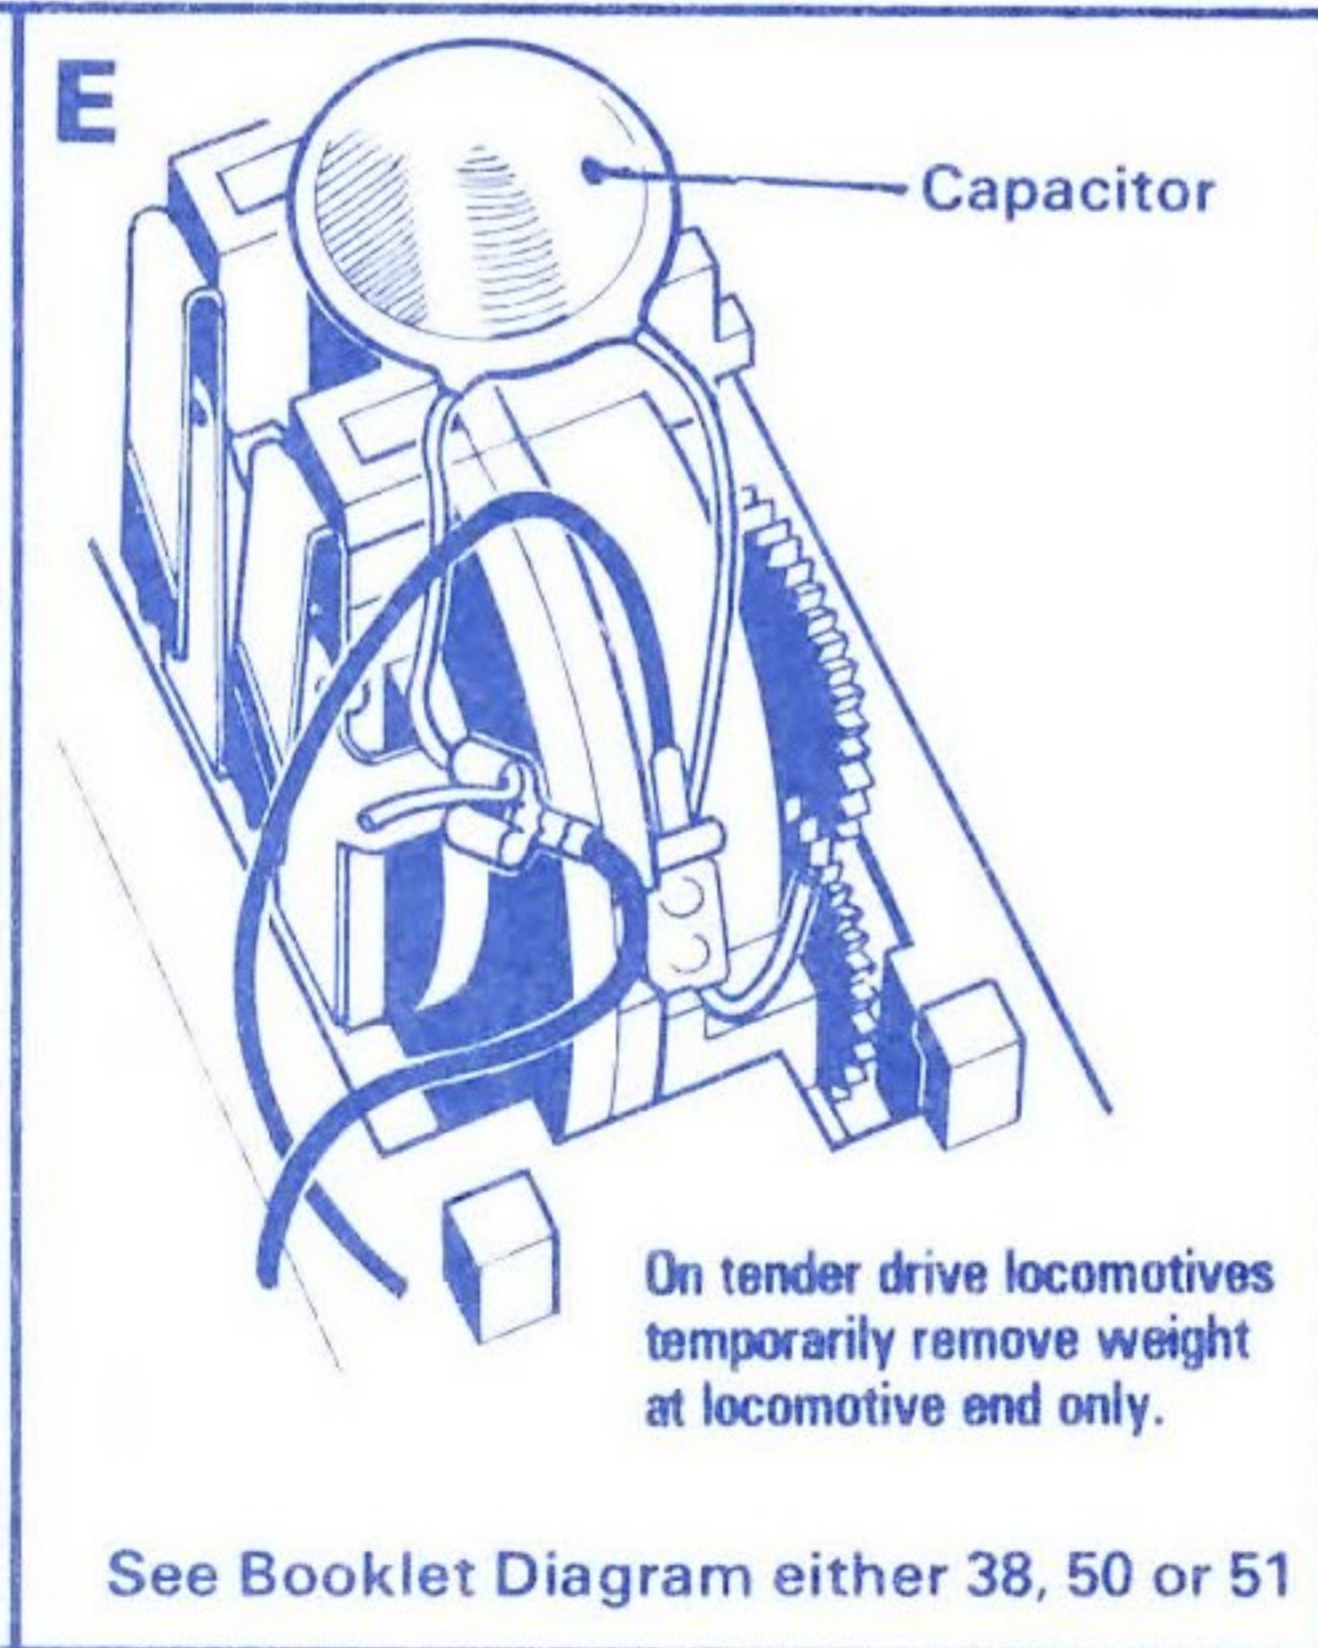
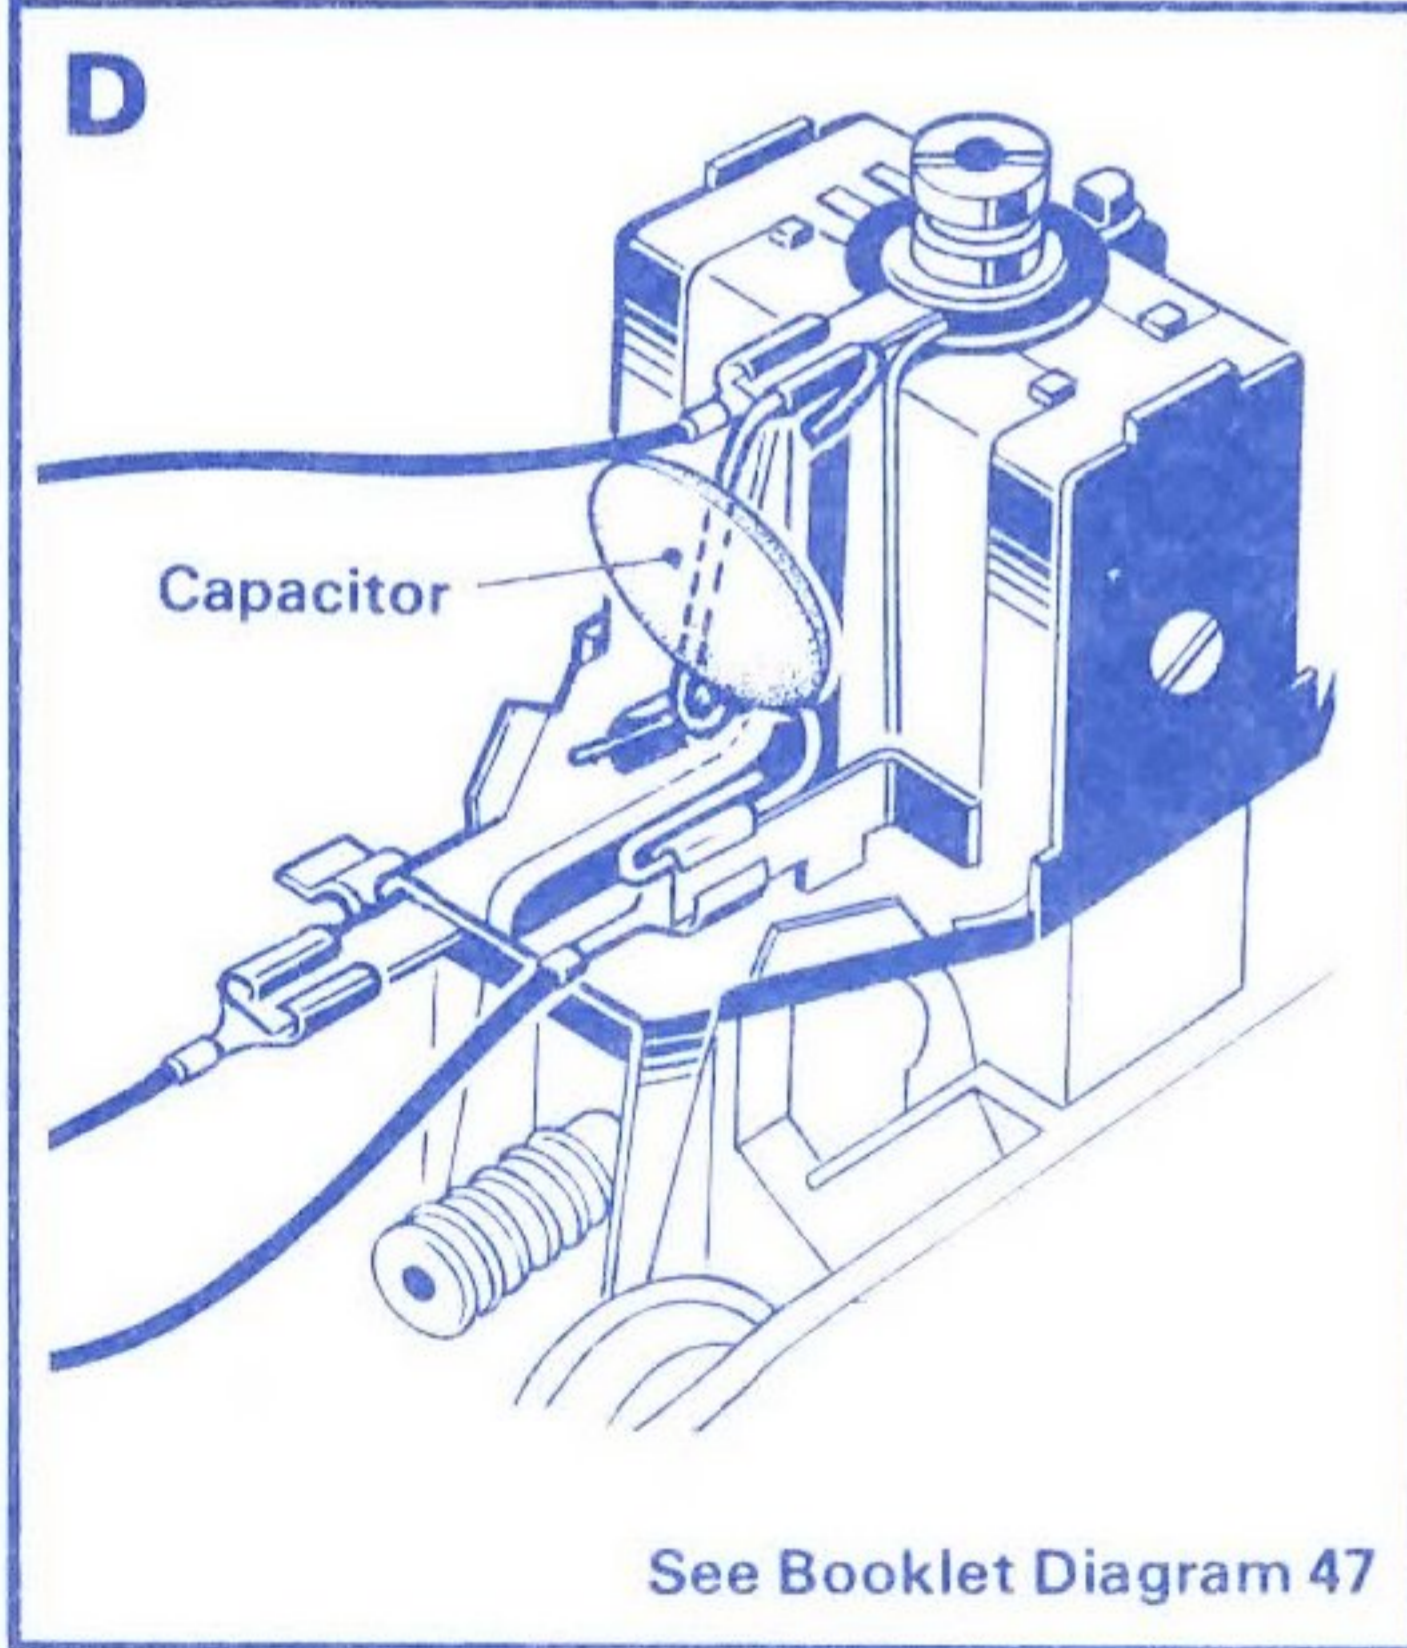
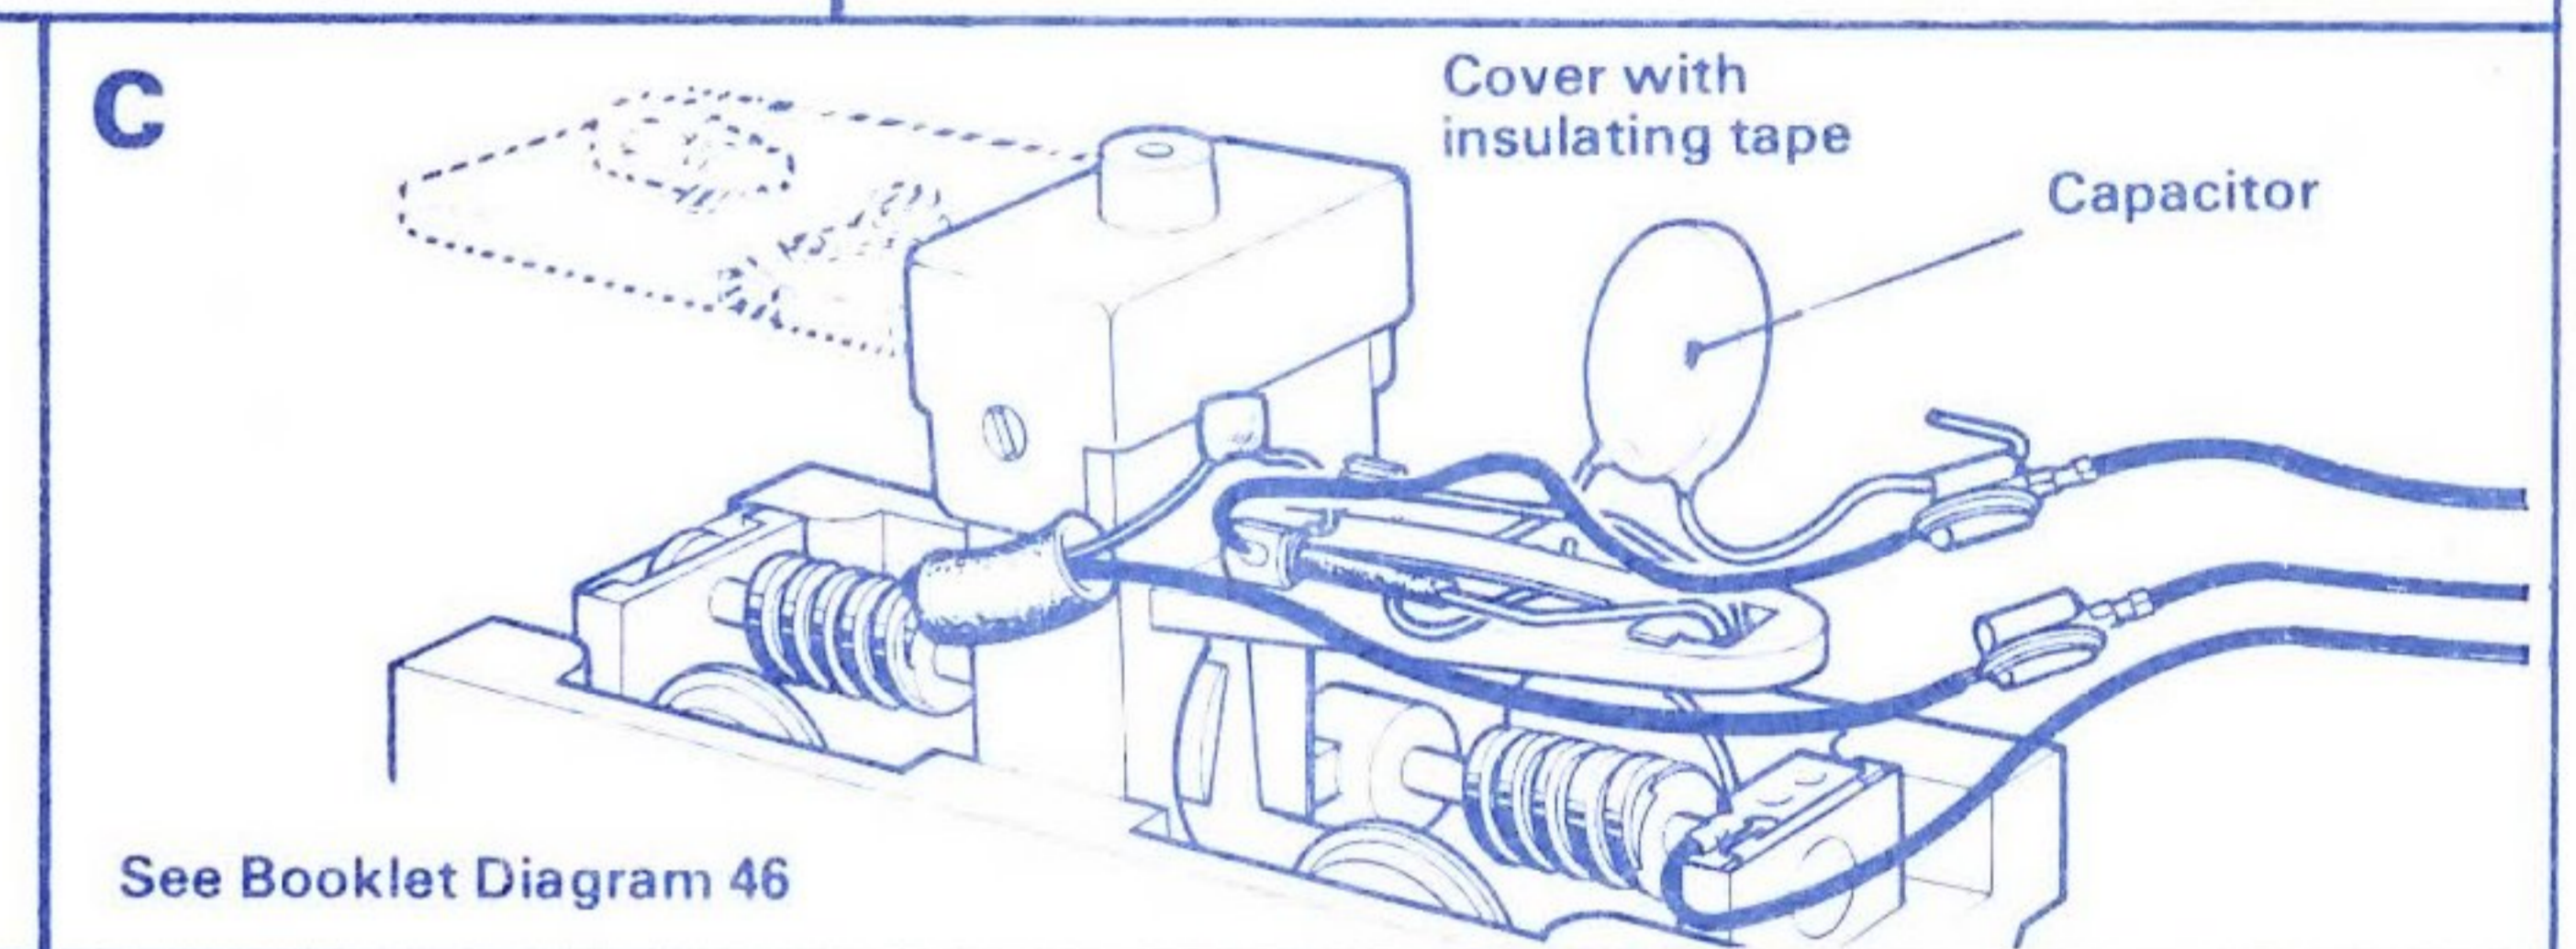
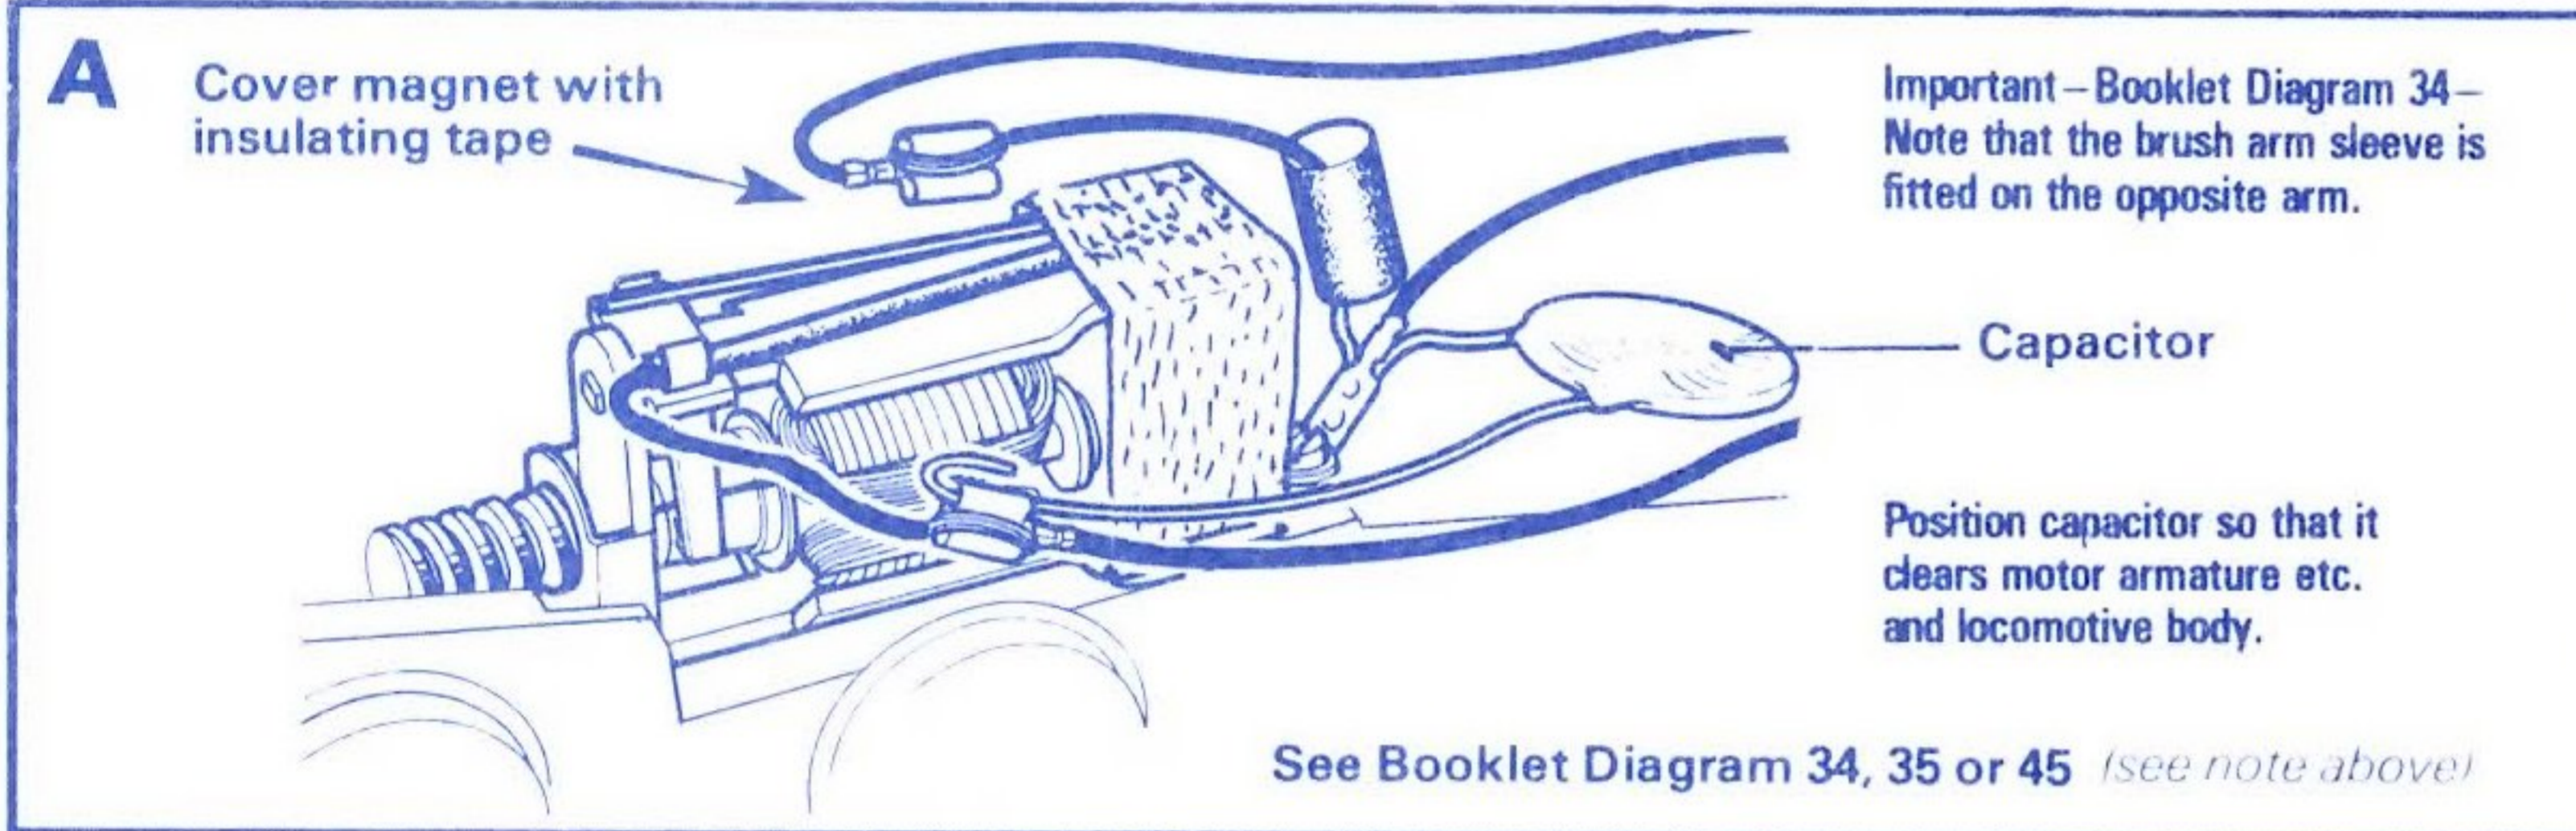


To be read in conjunction with the 3rd edition Locomotive Module Fitting Manual

Some Modules are supplied with a separate interference suppression capacitor which should be connected directly across the motor brushes as shown or the Module may be damaged. Modules

which do not include a separate capacitor do not require one as its function has been incorporated in the Module

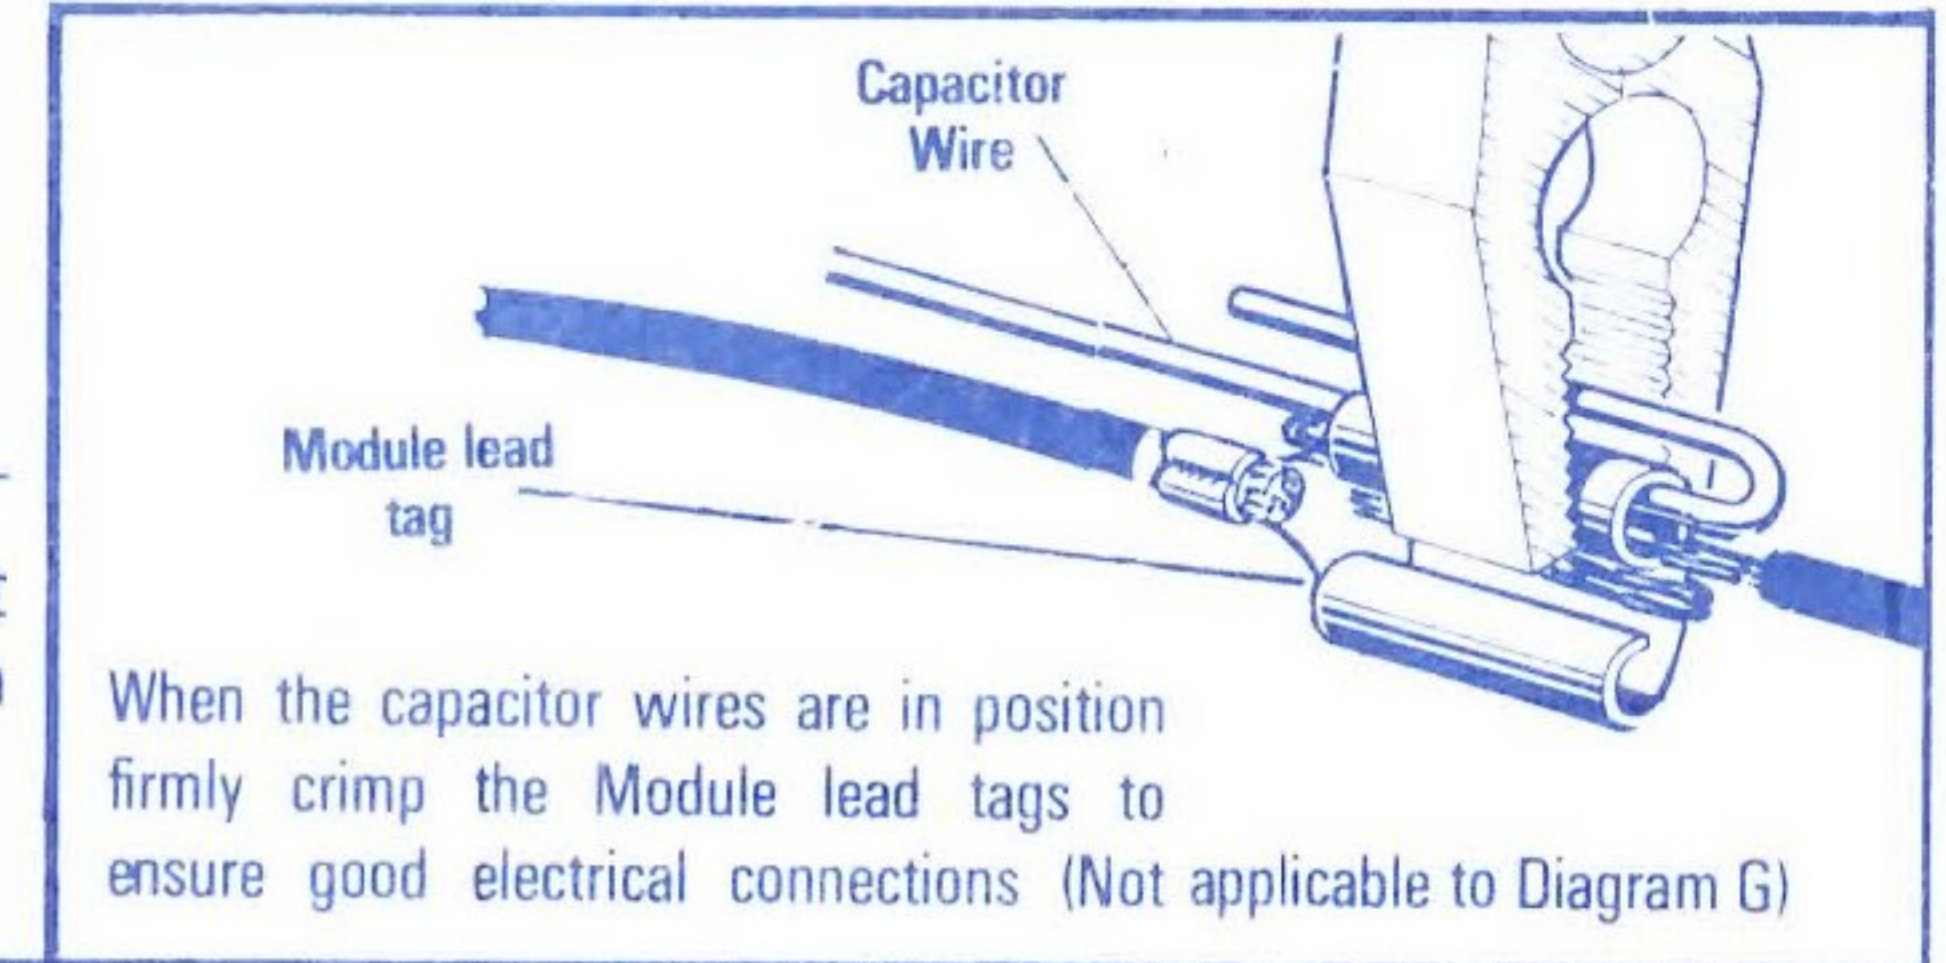

Enquiries regarding spares and service should be addressed to:
Rovex Service Centre, Albert Street, Ramsgate, Kent, CT11 9HD.