
Triang animovs

CHASSIS-T.90, T.95

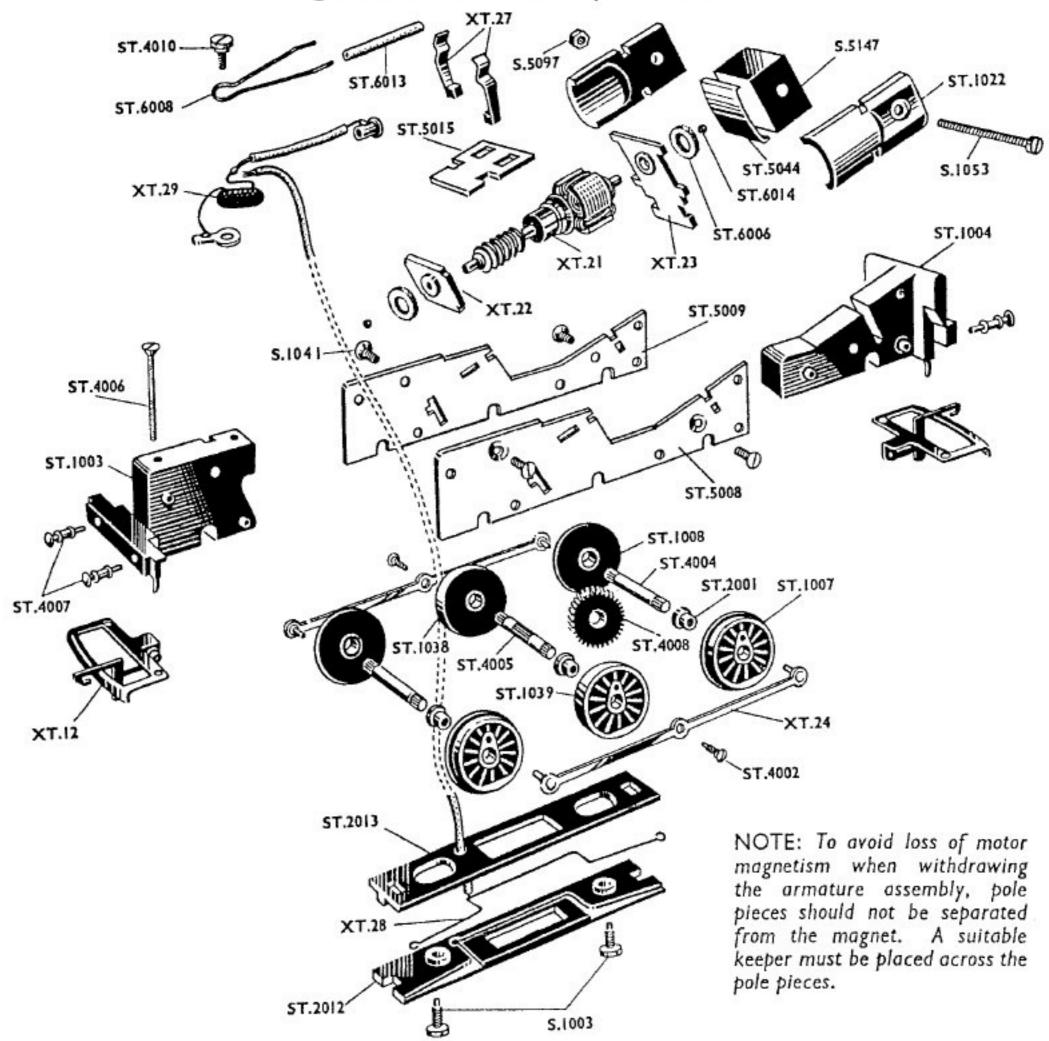

XT.12 XT.21 XT.22 XT.23 XT.24 XT.27 XT.28 XT.29	Coupling Unit Armature Assembly with commutator and worm Front Plate and Bearing Rear Plate and Bearing Coupling Rod with pins Brush Arm and Brush Collector Arm with lead T.V. Suppressor with lead and brush eyelet Centre Axle Assembly— comprising ST.1038, ST.1039, ST.4005, ST.4008	ST.1004 ST.1007 ST.1008 ST.1022 ST.1038	Flanged Bushed Driving Wheel Flanged Unbushed Driving Wheel Pole Piece Flangeless Unbushed Driving Wheel Flangeless Bushed Driving Wheel	ST.4002 ST.4004 ST.4005 ST.4006 ST.4007 ST.4008 ST.5008 ST.5009 ST.5015 ST.5044 ST.6006	Locomotive Axle-Knurled Body-Chassis Securing Screw Locomotive Buffer Worm Wheel (26T) Brush Spring Screw Left Main Frame Right Main Frame Brush Gear Diaphragm Rear Bearing Spring Bearing Felt
XT.31	Front and Rear Axle Assemblycomprising ST.1007, ST.1008, ST.4004		Wheel Insulating Bush Collector Diaphragm	ST.6013	Brush Spring Insulating Sleeve Thrust Ball (1/16")

Modifications are made to Tri-ang Railways models from time to time. If a spare part is required which does not coincide with the illustration, a full description should be given and, if necessary, a sketch or sample should accompany the order.



PRINTED IN ENGLAND

ROVEX SCALE MODELS LIMITED WESTWOOD, MARGATE, KENT, ENGLAND