

C.026 MARCH FORD 721
C.050 'J.P.S.' LOTUS 72
C.121 'ELF' TYRRELL


Parts also suitable for C.025 Ferrari 312 B-5

View shows car in "upright" position.
 When reassembling ensure wires from motor to guide blade are as shown.

To release top half of body from underpan remove all screws on underside of Body.

C.050 — When reassembling note that the shorter screw ($\frac{1}{4}$ ", 13402) is to be used in the front position.

Replacement Hubs, 05964/5, supplied will be black only.

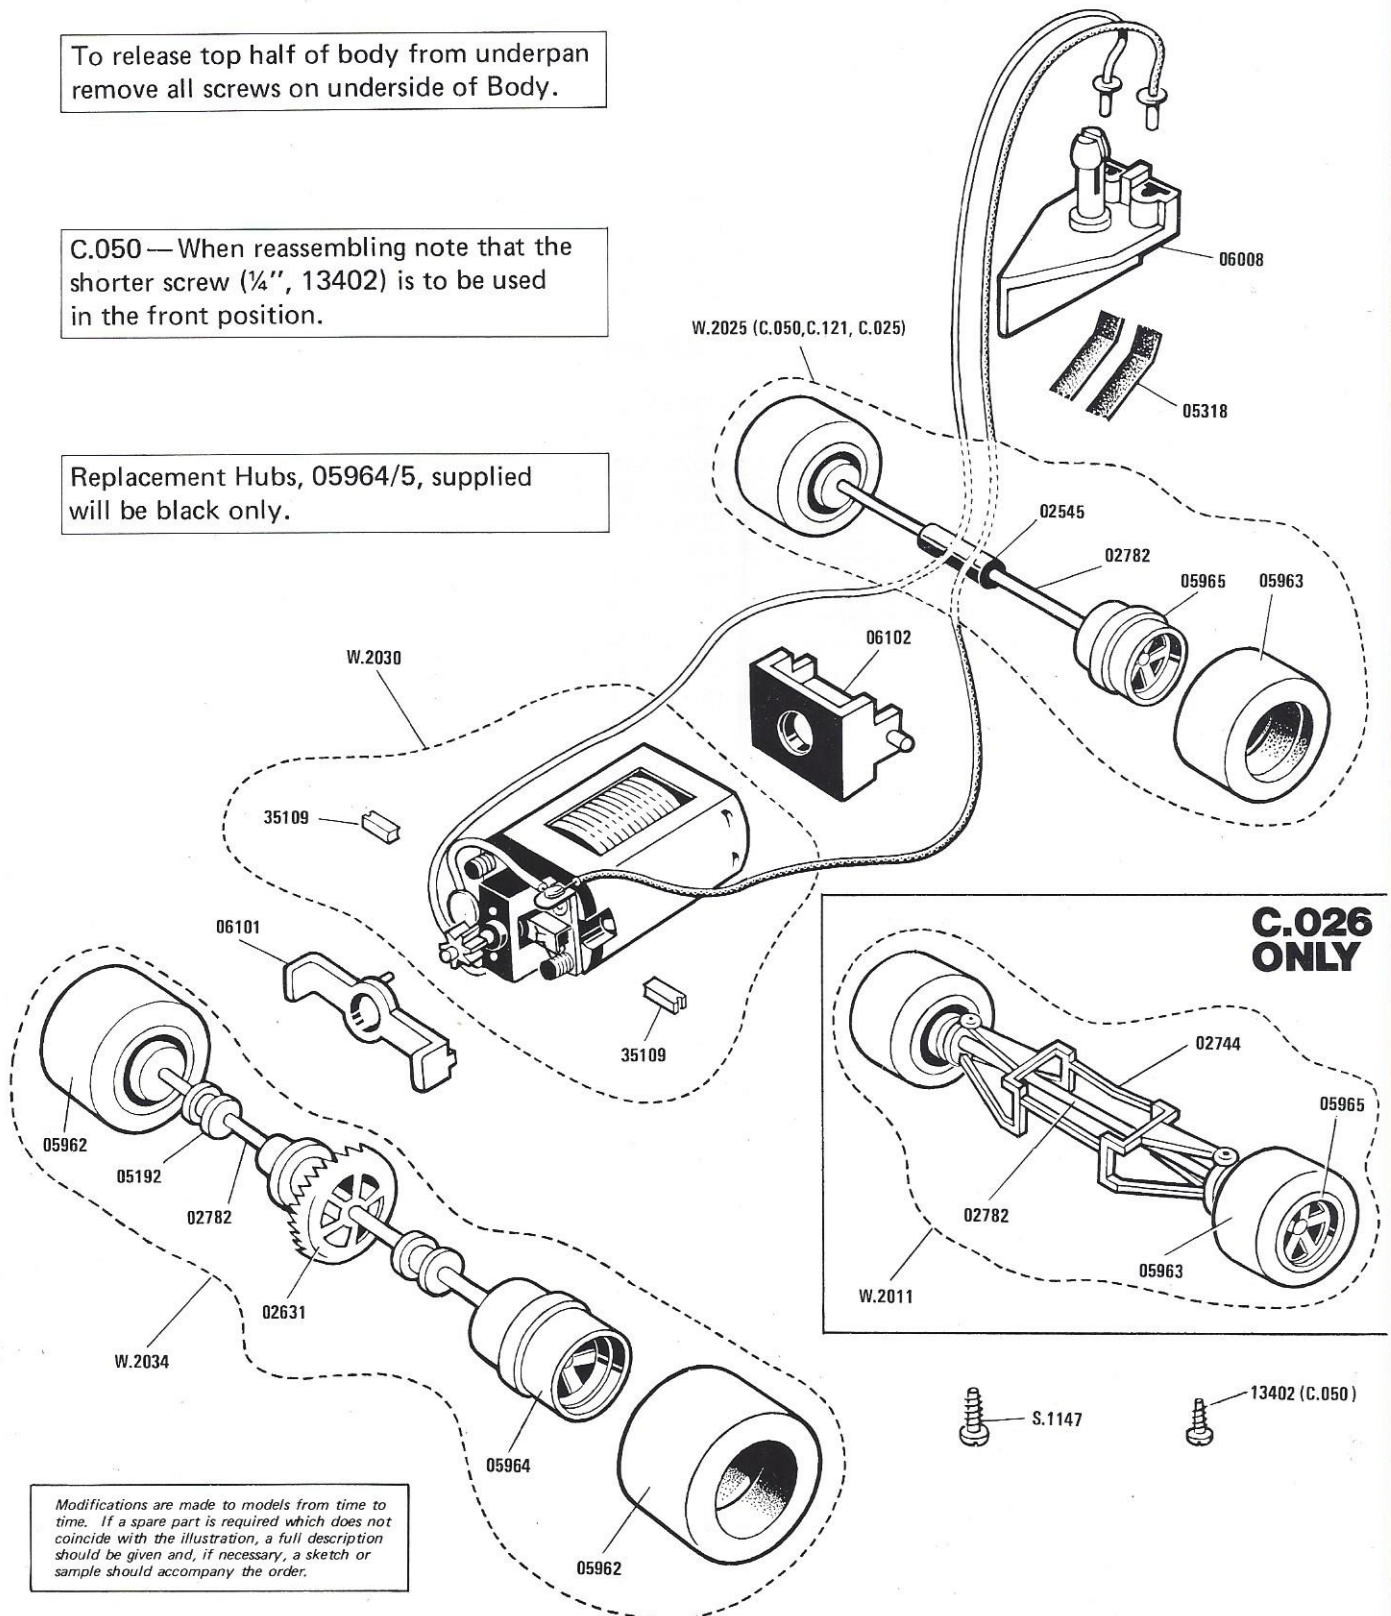

Modifications are made to models from time to time. If a spare part is required which does not coincide with the illustration, a full description should be given and, if necessary, a sketch or sample should accompany the order.

C.026 MARCH FORD 721
C.050 'J.P.S.' LOTUS 72
C.121 'ELF' TYRRELL

Parts also suitable for C.025 Ferrari 312 B-5

<i>Cat. No.</i>	<i>Item</i>	<i>For Rovex internal use only</i>
W.2011	Front Axle Assembly (C.026).....	C026-0083
W.2025	Front Axle Assembly (C.050, C.121, C.025)	C050-0664
W.2030	Silver Motor with Wires	C007-0790
W.2034	Rear Axle Assembly	C025-0665
S.1147	3/8" Body Screw	Z100-0390
02545	Front Axle Spacer	C050-0090
02631	Contrate Gear	C051-0050
02744	Suspension (C.026)	C026-0080
02782	Axle	C025-0660
05192	Axle Bearing	C050-0100
05318	Pick-up Braid	C007-0081
05962	Rear Tyre	C023-0780
05963	Front Tyre	C023-0770
05964	Rear Hub	C123-0040
05965	Front Hub	C123-0030
06008	Guide Blade	C051-0070
06101	Motor Bracket A — Rear	C050-0120
06102	Motor Bracket B — Front	C050-0130
13402	1/4" Body Screw	Z100-0620
35109	Carbon Brush	—
COMPLETE CAR BODIES (Not illustrated)		
Note: Bodies are supplied complete with underpans, engines, tail vanes, etc., but, apart from Body Screws (S.1147 and/or 13402), do not include any parts listed above.		
W.1026	For C.026 (Red)	—
W.1050	For C.050 (Black)	—
W.1121	For C.121 (Blue)	—

Notes

ROVEX Service Centre

ALBERT STREET, RAMSGATE,
 KENT, CT11 9HD, ENGLAND.