

L.M.S. CLASS 4P 2-6-4T LOCOMOTIVE—R.055


When the complete chassis is assembled the current collectors should be pushed right down in their sockets to make contact with the driving wheel rims.

Magnadhesion is fitted to this model.

View showing Cylinder Block (X.1128), Motion Bracket (L.5111) and Valve Gear (X.1282) in assembly positions.

The chassis (S.4425) and underframe (L.5268) clipfit together. To dismantle insert a small screwdriver at the front end and ease underframe off clips. The pony truck, driving wheel assemblies and bogie are held in position by the underframe.

Modifications are made to models from time to time. If a spare part is required which does not coincide with the illustration, a full description should be given and, if necessary, a sketch or sample should accompany the order.

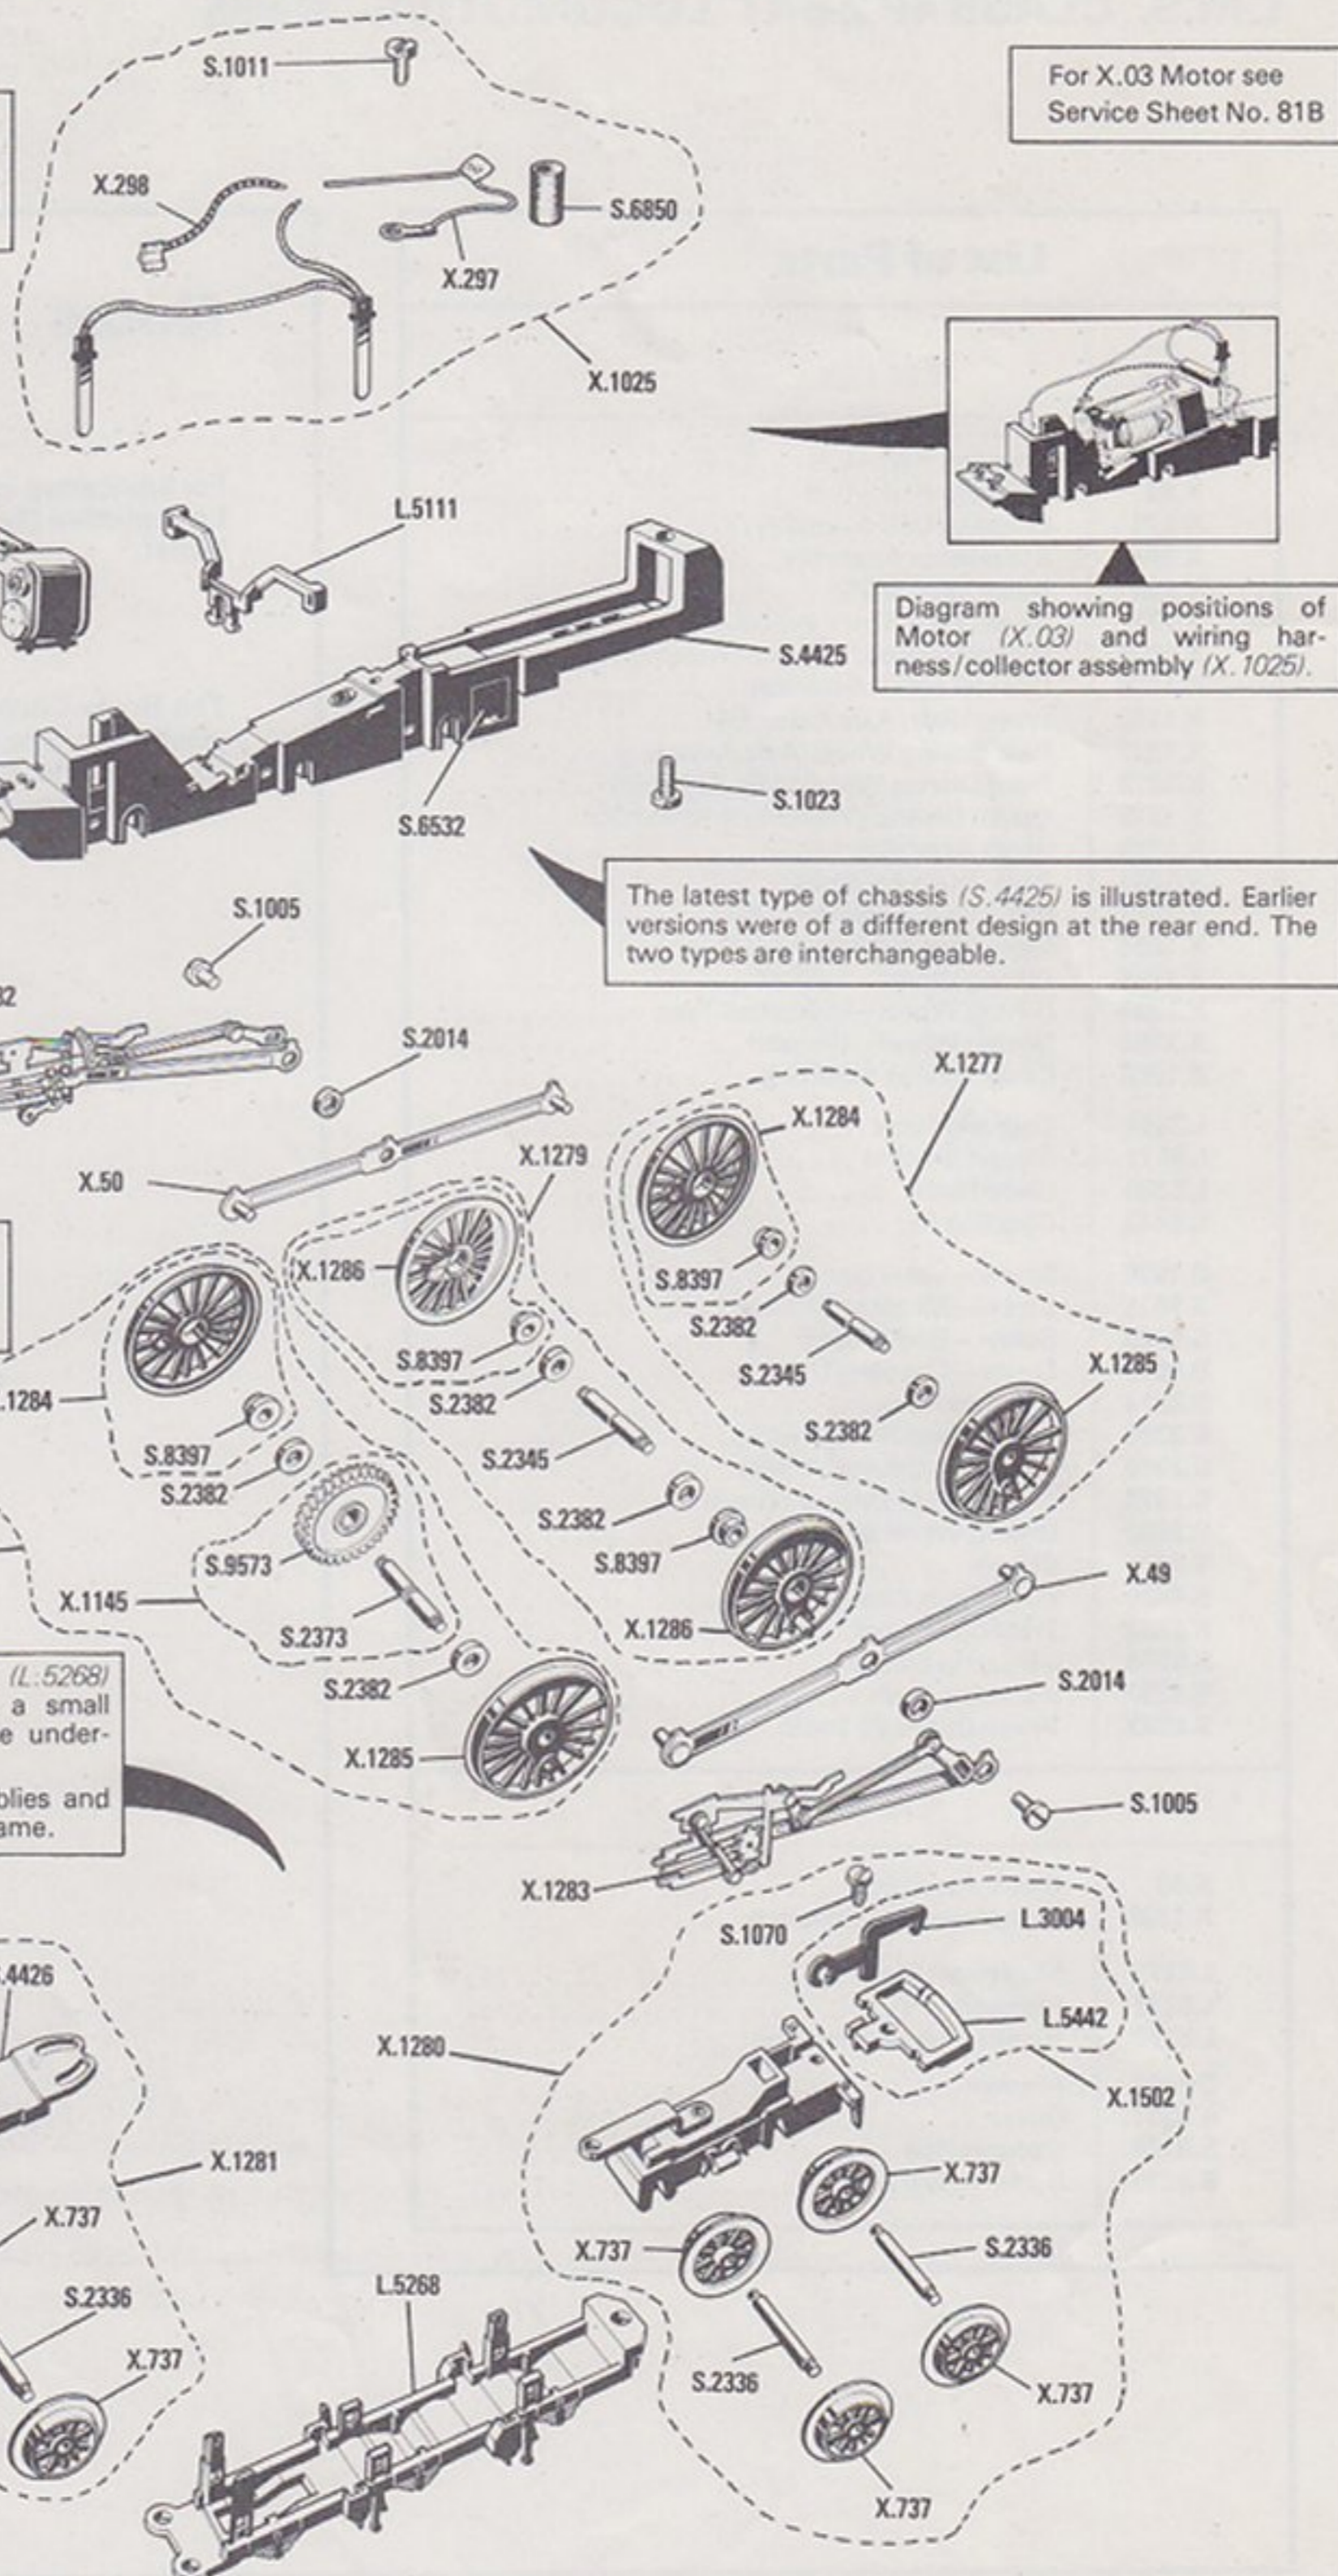

ROVEX Service Centre Albert Street, Ramsgate, Kent, CT11 9HD, England.

SERVICE SHEET No. 122
Issued April 1981

L.M.S. CLASS 4P 2-6-4T LOCOMOTIVE—R.055

List of Parts

Ref. No.	Item
X.49	Coupling Rod—L.H.
X.50	Coupling Rod—R.H.
X.171	Coupling Unit Assembly
X.297	Suppressor Assembly
X.298	Brush Lead & Clip
X.737	Bogie/Pony Truck Wheel
X.1025	Wiring Harness/Collector Assembly
X.1128	Cylinder Block Assembly
X.1145	Worm Gear/Axle Assembly
X.1277	Rear Driving Wheel/Axle Assembly
X.1278	Front Driving Wheel/Axle Assembly
X.1279	Centre Driving Wheel/Axle Assembly
X.1280	Bogie Assembly
X.1281	Pony Truck Assembly
X.1282	Valve Gear Assembly—R.H.
X.1283	Valve Gear Assembly—L.H.
X.1284	Driving Wheel—Bushed
X.1285	Driving Wheel—Unbushed Type
X.1286	Driving Wheel—Cranked
X.1502	Coupling Unit Assembly
L.3004	Coupling Hook
L.5111	Motion Bracket
L.5268	Underframe
L.5442	Coupling Bar
S.1005	Screw—Valve Gear
S.1011	Screw—Motor to Chassis
S.1023	Screw—Body Fixing
S.1070	Screw—Coupling Unit
S.2014	Distance Piece
S.2336	Axle—Bogie/Pony Truck
S.2345	Axle Plain-Driving Wheels
S.2373	Axle Knurled-Driving Wheels
S.2382	Driving Wheel Bearing
S.4425	Chassis
S.4426	Pony Truck Chassis
S.6532	Traction Magnet
S.6850	Insulating Sleeve
S.8397	Insulating Bush
S.9573	Worm Gear—28 Tooth
<i>Items not illustrated</i>	
X.03	Motor Assembly
X.1326	Body Assembly Complete
L.5271	Mushroom Vent
L.5273	Pipework
L.5274	Handrail with Stanchions
S.6390	Fireman
S.6391	Driver
S.8784	Vacuum Pipe
S.8910	Buffer—Oval Head

Notes

For lubricating instructions refer to the Hornby Locomotive Operation and Maintenance leaflet.

The Bogie Coupling Assembly (X.1502) has a plastic bar. The complete unit is interchangeable with the all metal type (X.596) fitted to some earlier models of this locomotive.