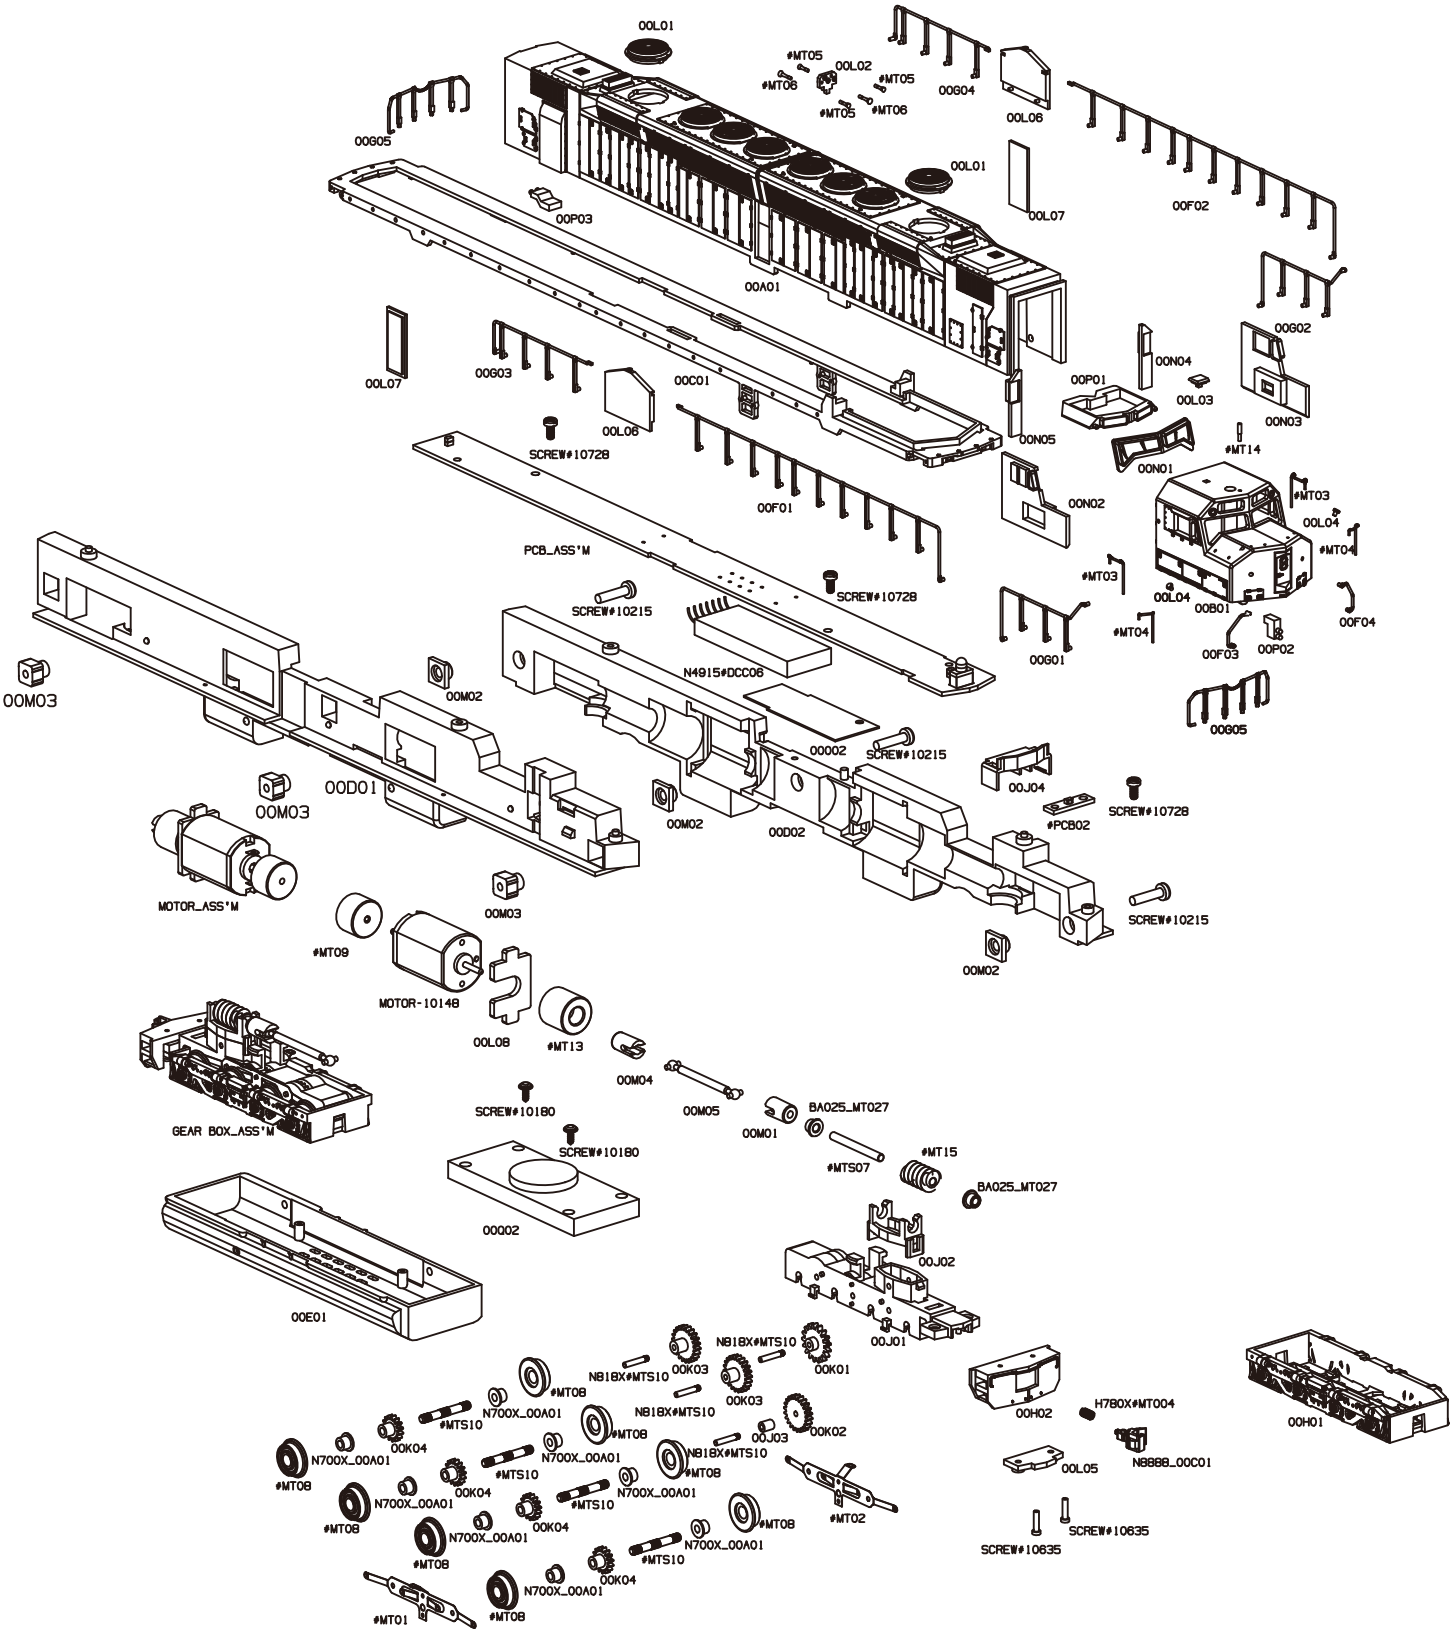

JOIN NO. ON PCB	1	2	4	5	6	7	8
WIRING TO:	MOTOR	REVERSE LIGHT	POWER LEFT	MOTOR	FORWARD LIGHT	LIGHT COMMON	POWER RIGHT
WIRE COLOR	ORANGE	YELLOW	BLACK	GREY	WHITE	BLUE	RED

DIAGRAM " A "

Decoder installation:
1.Remove the body from the chassis.
2.Connect the wires directly to the decoder wires. Match the color of wires according the diagram 'A' and 'B'

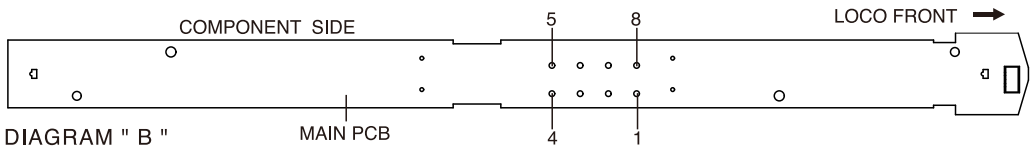

DIAGRAM " B "